

Installation Manual

AUDI A3 5DR
AU-A3-5-B-18



COMPONENTS INCLUDED



FIXING CLIPS



CL-M13 x 6



Side Shade Installation

AUDI A3 5DR
AU-A3-5-B-18

COMPONENTS NEEDED:




STEP #1

ATTACH CLIPS ON SHADE EDGES




STEP #2

POSITION THE SIDE SHADE

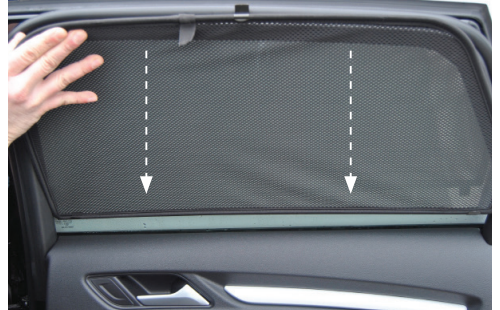

STEP #3

INSERT CLIPS INSIDE WEATHERSTRIP

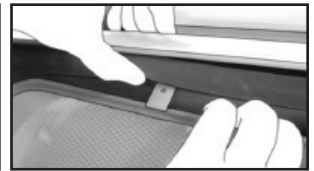

STEP #4

ENSURE SECURELY FITTED IN PLACE



CAR
SHADES