


Installation Manual

BMW 2 SERIES ACTIVE TOURER 5DR
BMW-2SAT-5-A-18



COMPONENTS INCLUDED

SHADES

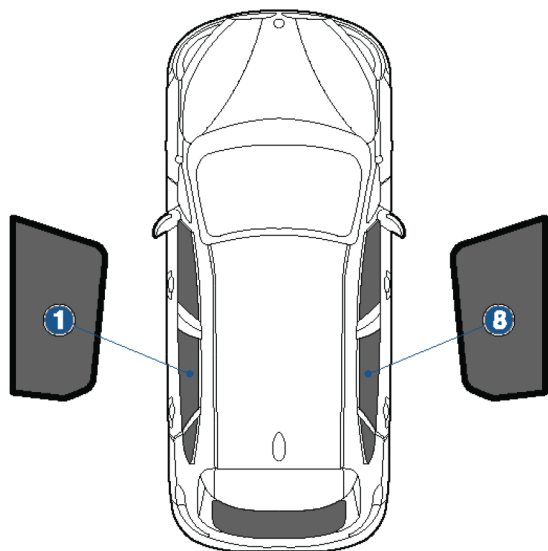

1+8

FIXING CLIPS



CL-M09 x 2



CL-T01 x 1



Side Shade Installation

BMW 2 SERIES ACTIVE TOURER 5DR
BMW-2SAT-5-A-18

COMPONENTS NEEDED:



1+8



CL-M09 x 2


STEP #1

INSERT CLIPS INSIDE WEATHERSTRIP



STEP #2

POSITION THE SIDE SHADE

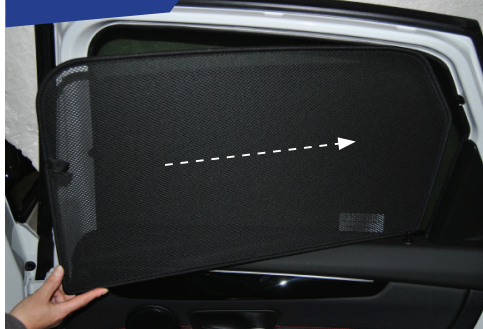


STEP #3

ATTACH SIDE SHADE BEHIND CLIPS



STEP #4

ENSURE SECURELY FITTED IN PLACE

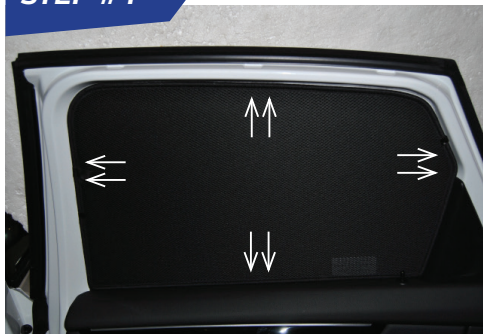

CAR[®]
S H A D E S