


# Installation Manual

BMW MINI COUNTRYMAN 5DR  
MIN-COU-5-B



COMPONENTS INCLUDED

SHADES

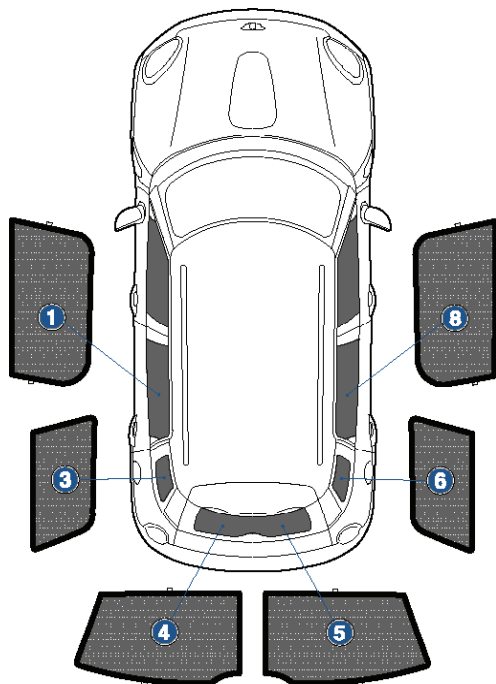

FIXING CLIPS



CL-M02 x 2



CL-M05 x 2



CL-M14 x 1



CL-M12 x 6



CL-T01 x 1

# Side Shade Installation

BMW MINI COUNTRYMAN 5DR  
MIN-COU-5-B

COMPONENTS NEEDED:




## STEP #1

INSERT CLIPS INSIDE WEATHERSTRIP



## STEP #2

POSITION THE SIDE SHADE

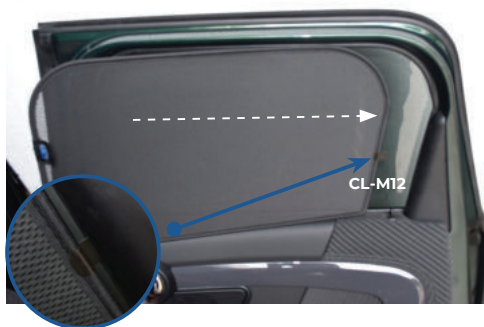


## STEP #3

ATTACH SIDE SHADE BEHIND CLIPS



## STEP #4

ENSURE SECURELY FITTED IN PLACE

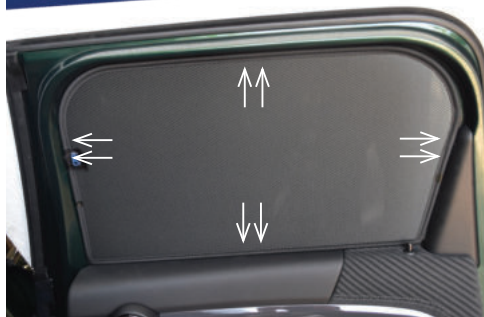

**CAR**  
SHADES

# Quarter Light Shade Installation

BMW MINI COUNTRYMAN 5DR  
MIN-COU-5-B

COMPONENTS NEEDED:



## STEP #1

ATTACH CLIPS ON SHADE EDGES



## STEP #2

INSERT CLIPS BEHIND INTERIOR TRIM



## STEP #3

ENSURE SECURELY FITTED IN PLACE



# Rear Shade Installation

BMW MINI COUNTRYMAN 5DR  
MIN-COU-5-B

## COMPONENTS NEEDED:




### STEP #1

ATTACH CLIPS ON SHADE EDGES



### STEP #2

POSITION THE REAR SHADE

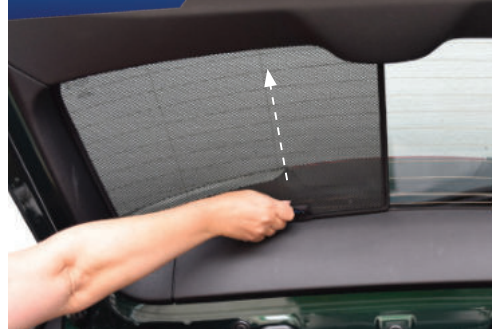


### STEP #3

INSERT CLIPS BEHIND INTERIOR TRIM



### STEP #4

REPEAT THE PROCESS ON OTHER SHADE

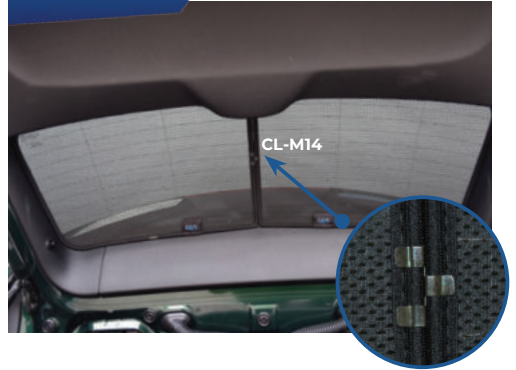

### STEP #5

ENSURE SECURELY FITTED IN PLACE

