

# Installation Manual

RENAULT CAPTUR 5DR  
REN-CAPT-5-A-18



## COMPONENTS INCLUDED



## FIXING CLIPS



CL-M05 x 4



CL-T01 x 1



# Side Shade Installation

RENAULT CAPTUR 5DR  
REN-CAPT-5-A-18

COMPONENTS NEEDED:



## STEP #1

INSERT CLIPS INSIDE WEATHERSTRIP USING TOOL




## STEP #2

POSITION THE SIDE SHADE




## STEP #3

ATTACH SIDE SHADE BEHIND CLIPS

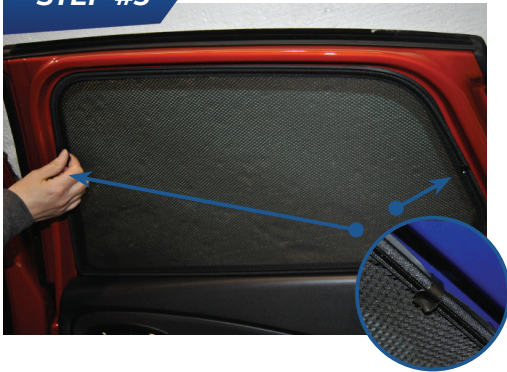

## STEP #4

ENSURE SECURELY FITTED IN PLACE

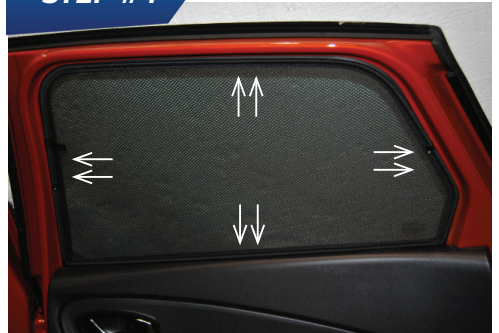

**CAR**  
SHADES