

Installation Manual

SUBARU FORESTER 5DR
SUB-FORS-5-A-18



Shades



Fixing Clips



CL-M02 x 4



Installation

SUBARU FORESTER 5DR
SUB-FORS-5-A-18

Components Needed



Side Shades



CL-M02 x 4

Side Shade Installation


STEP #1

ATTACH CLIPS ON SHADE EDGES




STEP #2

POSITION THE SIDE SHADE

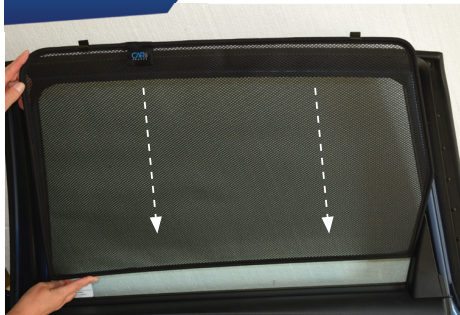


STEP #3

INSERT CLIPS INSIDE WEATHERSTRIP

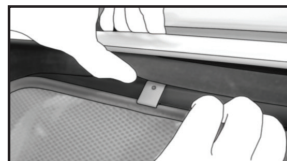

STEP #4

ENSURE SECURELY FITTED IN PLACE

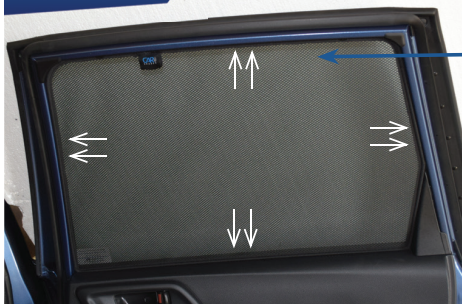

CAR[®]
SHADES