

Installation Manual

VOLVO XC60 5DR
VOL-XC60-5-B-18



COMPONENTS INCLUDED



FIXING CLIPS



CL-M02 x 4



CL-M12 x 2



CL-M13 x 2



Side Shade Installation

VOLVO XC60 5DR
VOL-XC60-5-B-18

COMPONENTS NEEDED:



CL-M02 x 2




CL-M12 x 1



CL-M13 x 1


STEP #1

ATTACH CLIPS ON SHADE EDGES

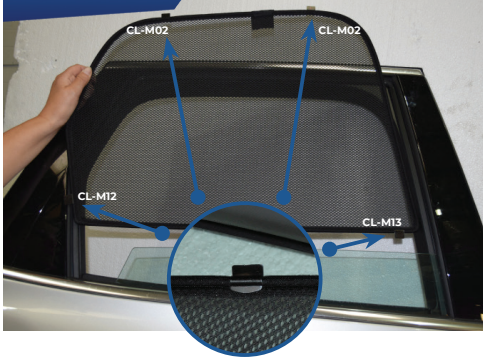


STEP #2

POSITION THE SIDE SHADE

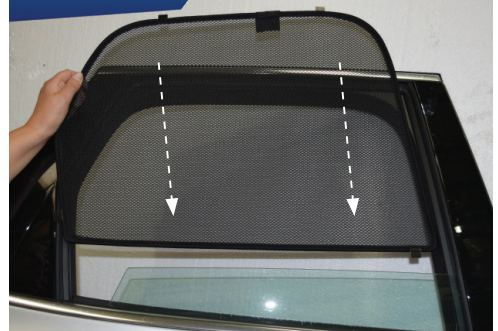

STEP #3

INSERT CLIPS INSIDE WEATHERSTRIP

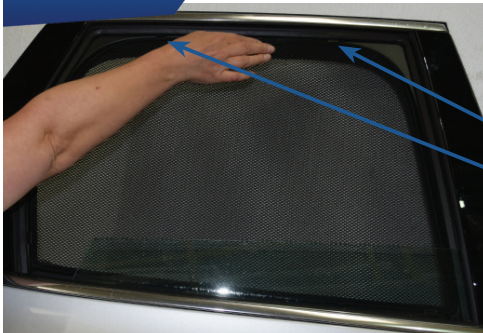

STEP #4

ENSURE SECURELY FITTED IN PLACE



CAR
SHADES