


Installation Manual

VW TIGUAN 5DR
VW-TIGU-5-A-18



COMPONENTS INCLUDED

SHADES

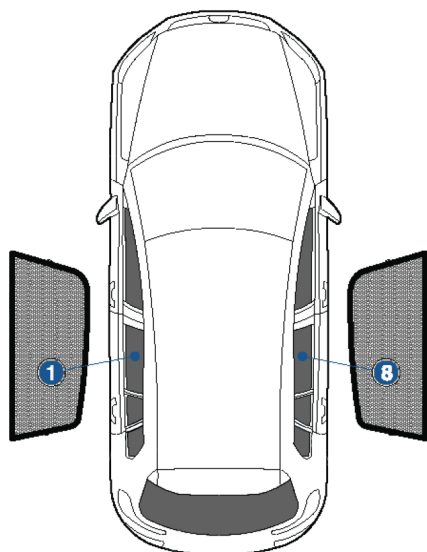

1+8

FIXING CLIPS



CL-M05 x 4




CL-T01 x 1

CAR
SHADES

Side Shade Installation

VW TIGUAN 5DR
VW-TIGU-5-A-18

COMPONENTS NEEDED:

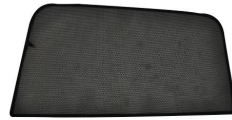

1+8



CL-M05 x 4

STEP #1

INSERT CLIPS INSIDE WEATHERSTRIP




STEP #2

POSITION THE SIDE SHADE




STEP #3

ATTACH SIDE SHADE BEHIND CLIPS

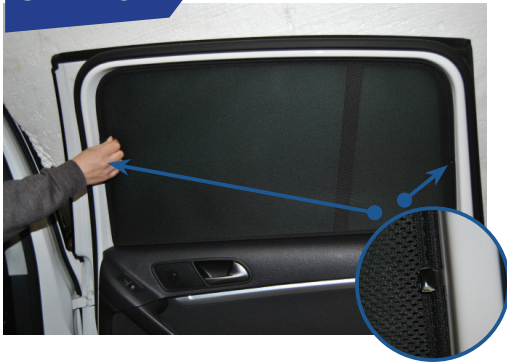

STEP #4

ENSURE SECURELY FITTED IN PLACE

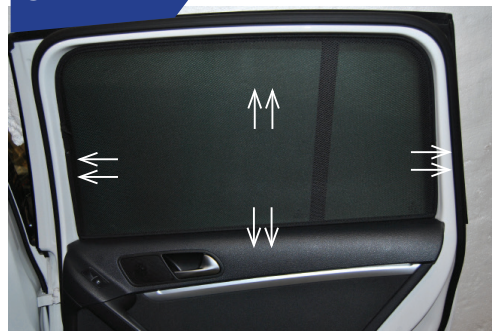

CAR[®]
S H A D E S