


ASSEMBLY INSTRUCTIONS


VARIOCAGE

compact single






A Floor Rear

00367 00368	1X
Product no	No of items





B Floor Front

00367 00368	1X
Product no	No of items

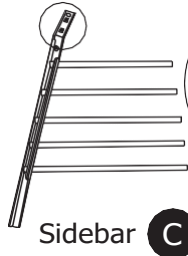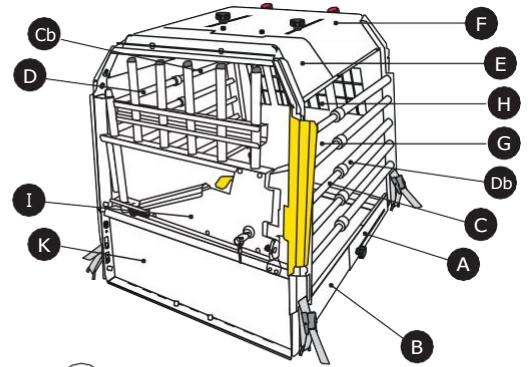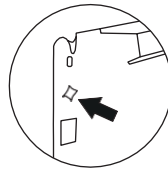


C Sidebar

00367 00368	1X
Product no	No of items

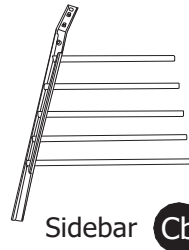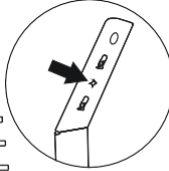


Cb Sidebar

00367 00368	1X
Product no	No of items

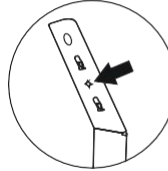



D Sidebar

00367 00368	1X
Product no	No of items

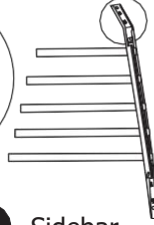


Db Sidebar

00367 00368	1X
Product no	No of items

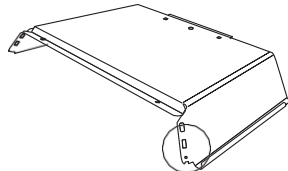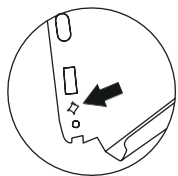


E Roof Front

00367 00368	1X
Product no	No of items

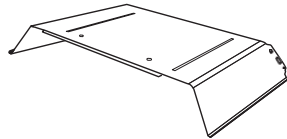



F Roof Rear

00367 00368	1X
Product no	No of items

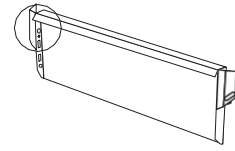


L Lower Panel Front

00367 00368	1X
Product no	No of items

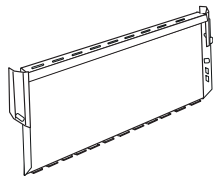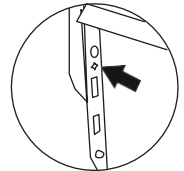


G Lower Panel Rear

00367 00368	1X
Product no	No of items

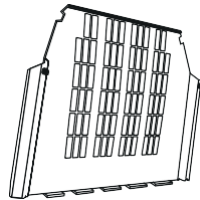

H Escape Hatch

00367 00368	1X
Product no	No of items

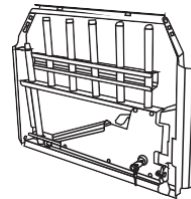


I Door Section




00367 00368	1X
Product no	No of items


ASSEMBLY KIT IS DIMENSIONED FOR THE LARGEST CAGE, FOR SMALLER CAGES YOU HAVE MORE PARTS THAN YOU NEED

M-460641D 5X rubber	M-SM6X14IA 18X Ø13mm plastic	M-SM6X12 4X 	M-460641AQ 2X red	ALLEN KEY 4 1X 	M-460641AY 10X rubber end caps 	M-460641BA 10X plastic end caps
M-R3015M5S 4X 	M-B13265SLD 4X Ø13mm plastic 	M-VBM5X16 4X 	M-10240 4X 			


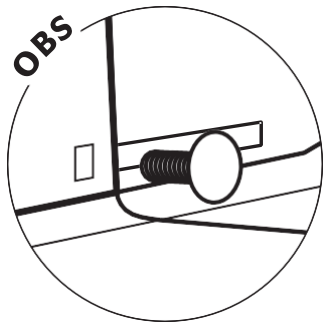
1



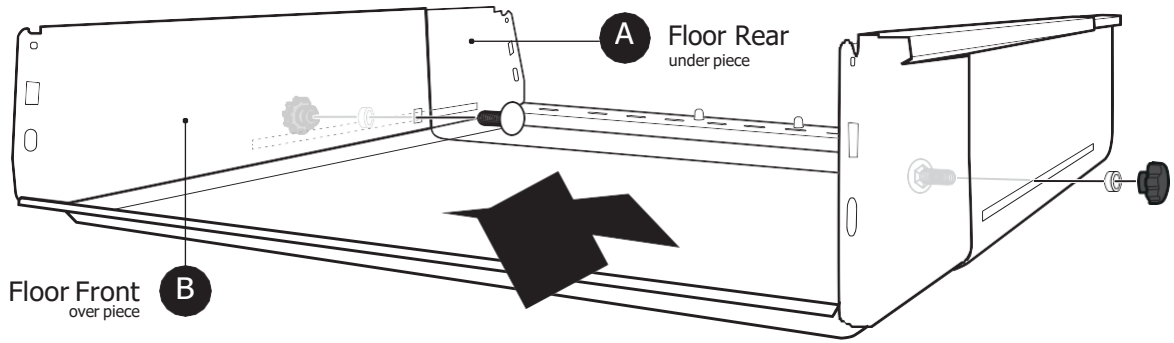


M-R3015M5S 2X 	M-B13265SLD 2X Ø13mm plastic 	M-VBM5X16 2X 
---	---	--

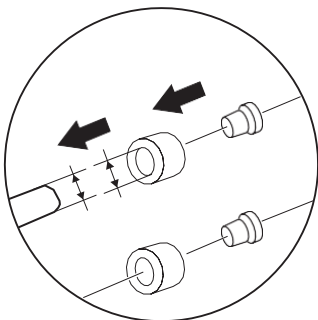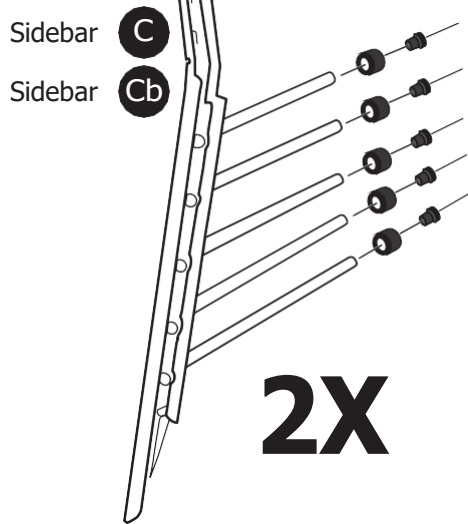



STEP
2



M-460641AY 10X rubber end caps 	M-460641BA 10X plastic end caps 
---	--



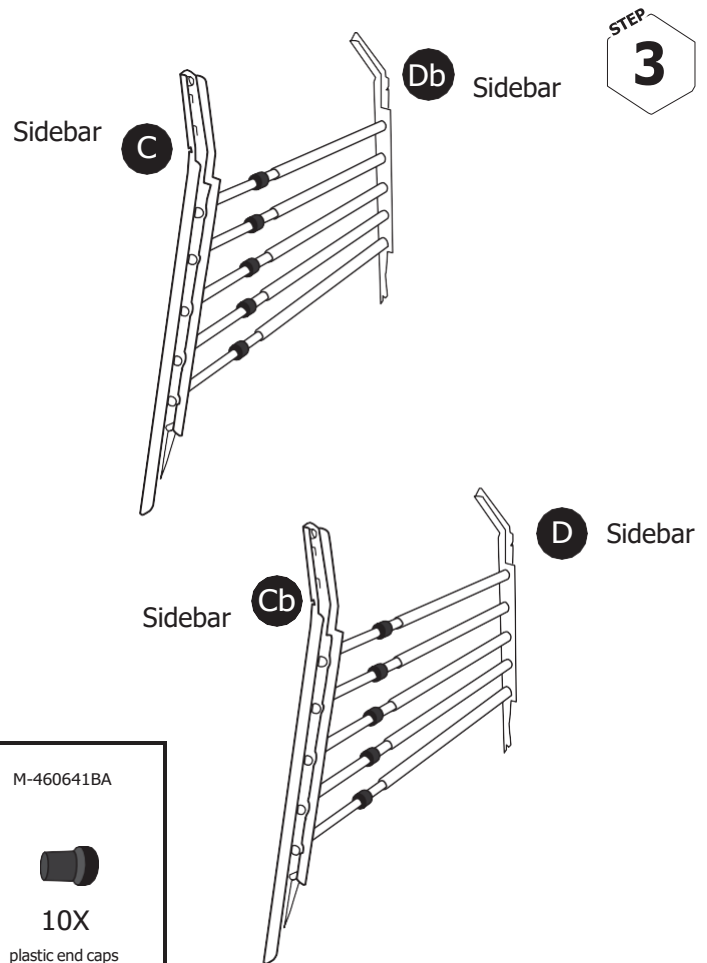


4

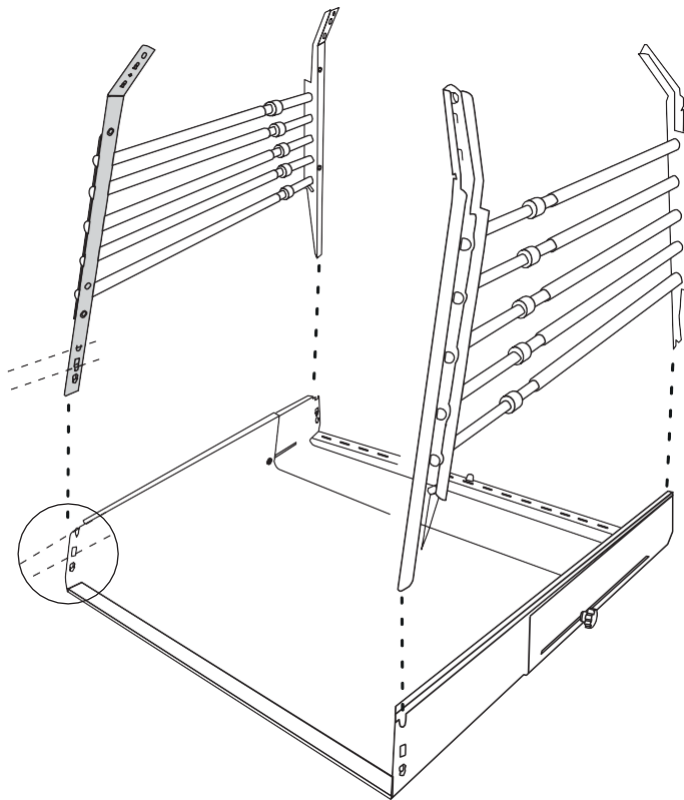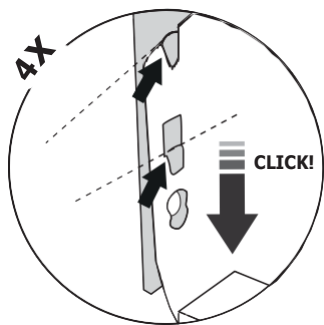


STEP
5



180°

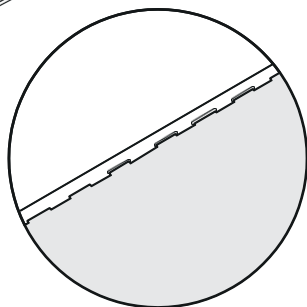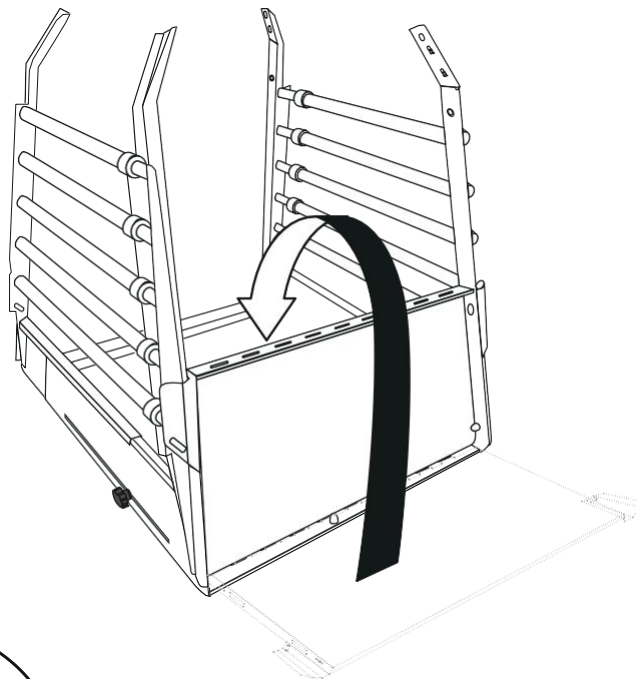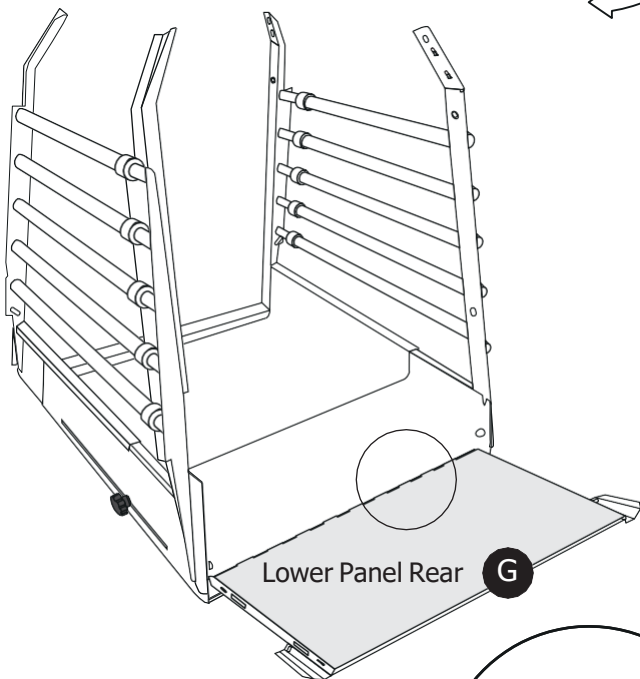

6




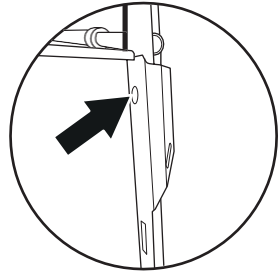


M-SM6X12
2X

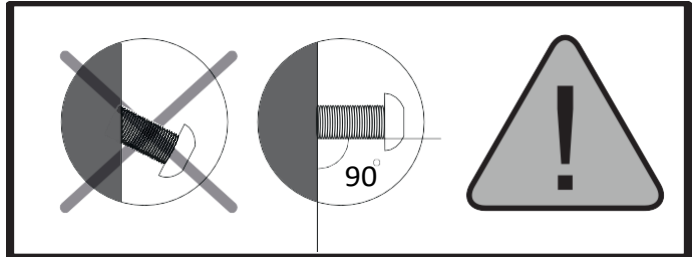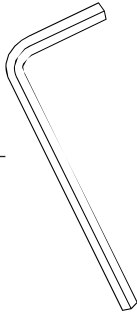


90°


STEP
7

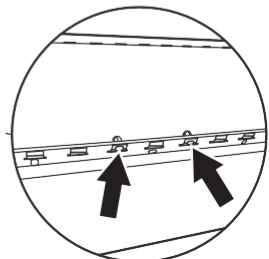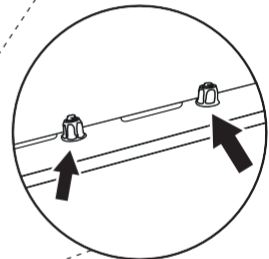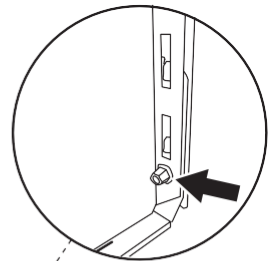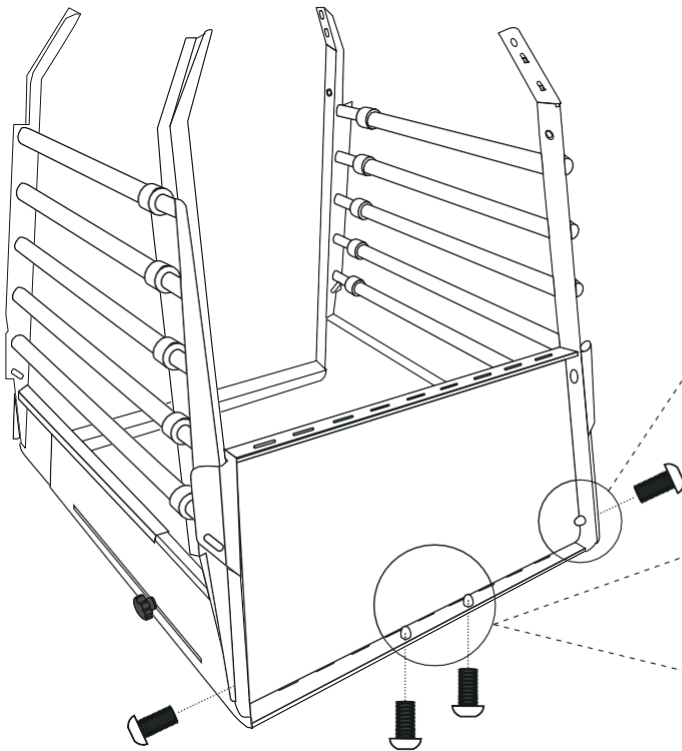


M-SM6X14IA
4X




8

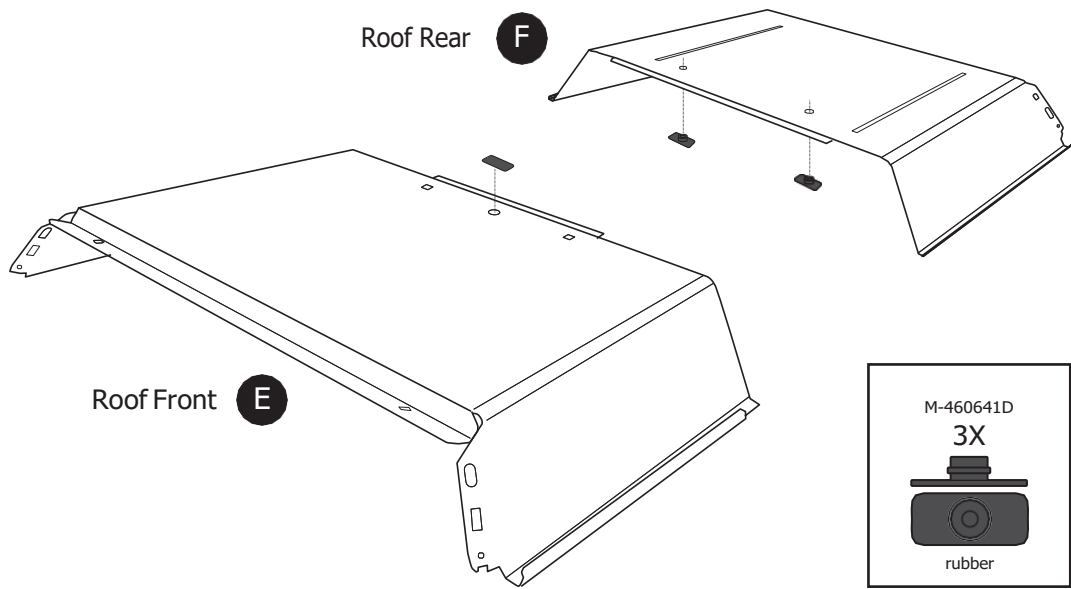

STEP 9



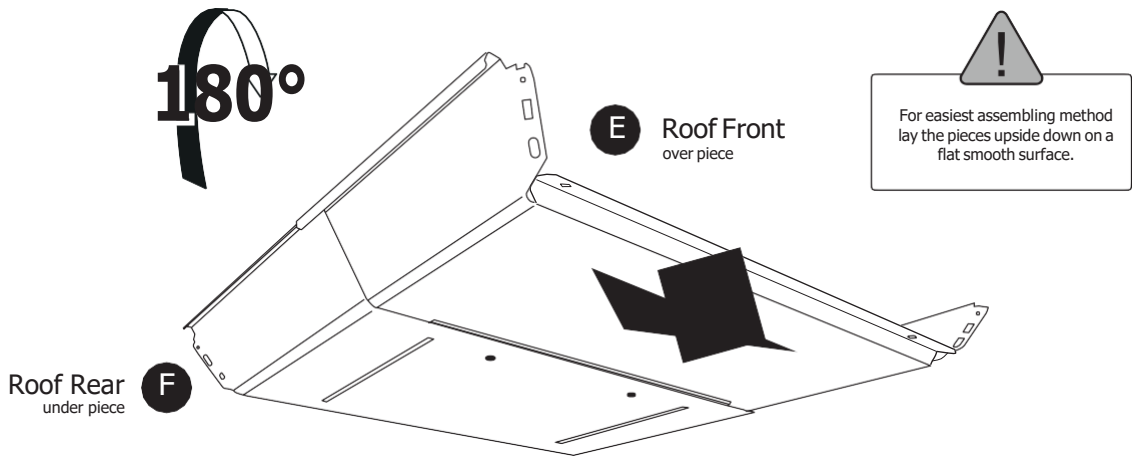


STEP 10

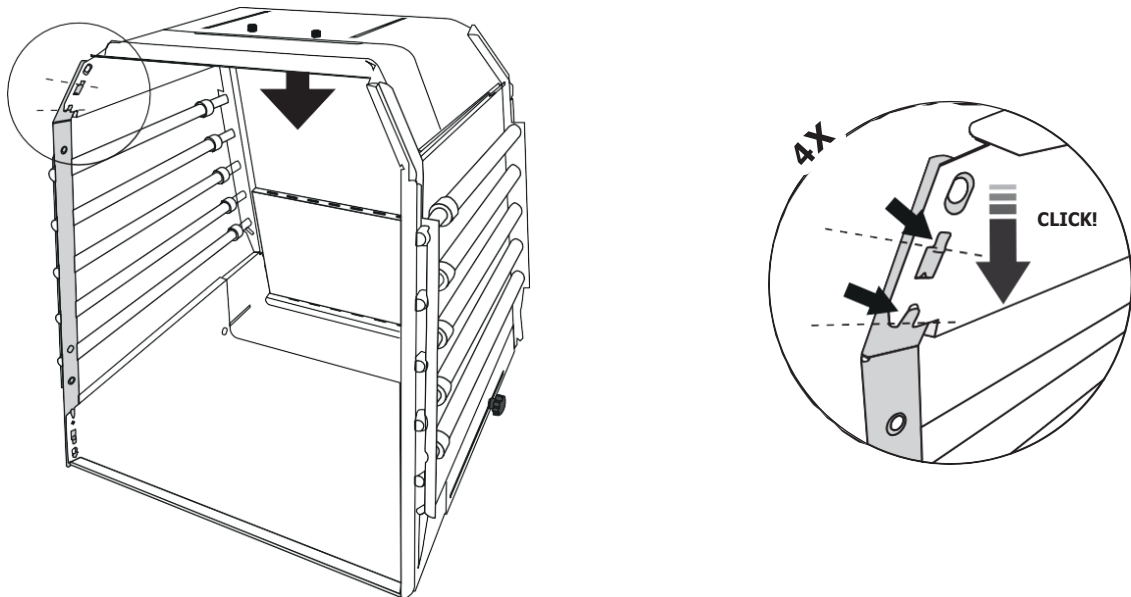





11

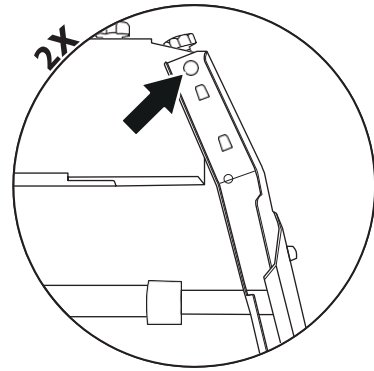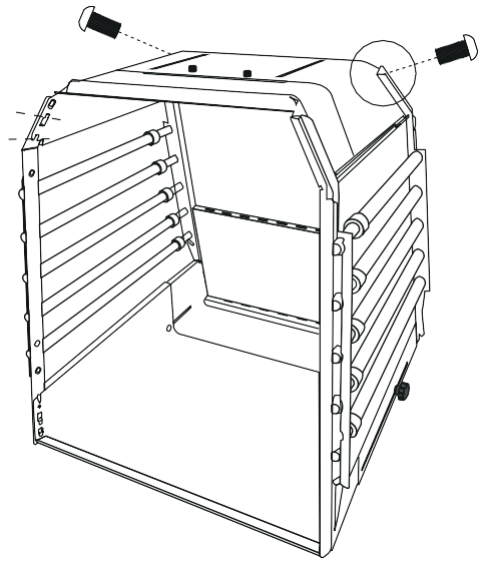M-SM6X14IA
2X

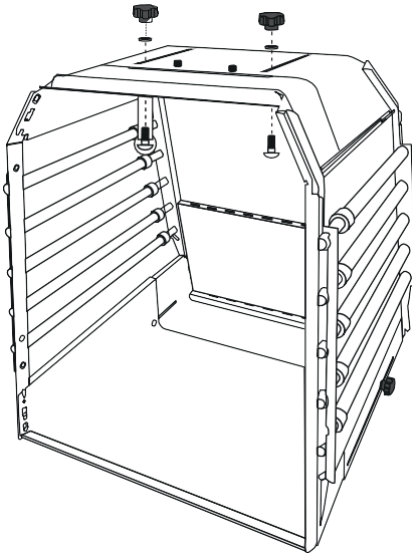


STEP
12








M-R3015M5S 2X	M-B13265SLD 2X Ø13mm plastic	M-VBM5X16 2X
		

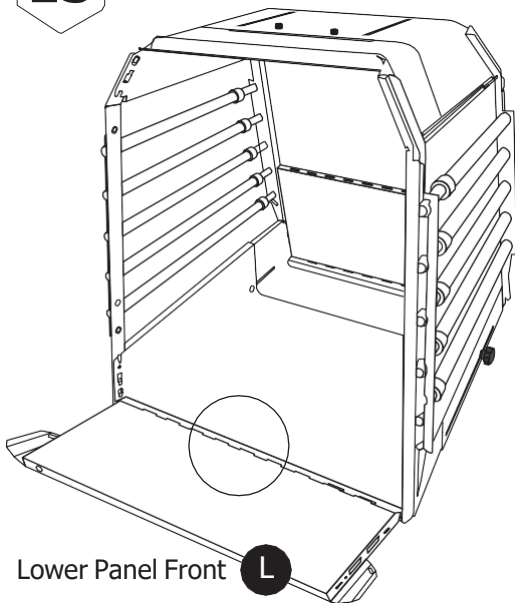STEP
13




Lower Panel Front **L**


M-SM6X14IA 4X	M-SM6X12 2X
	

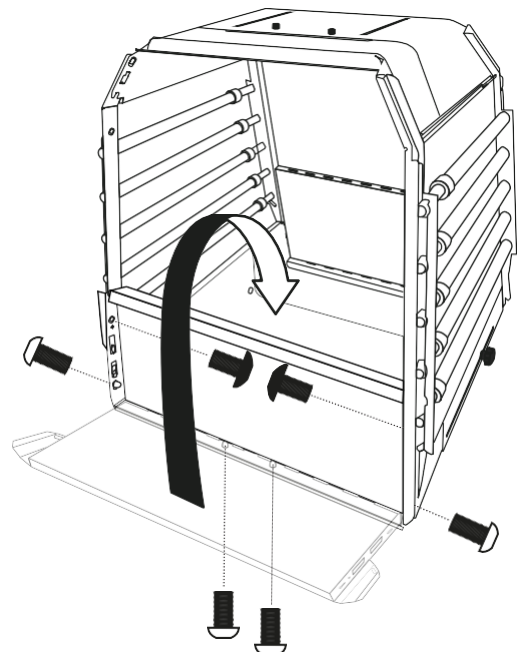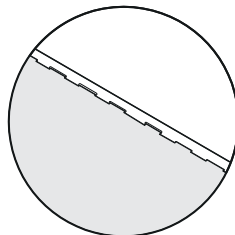


STEP
14

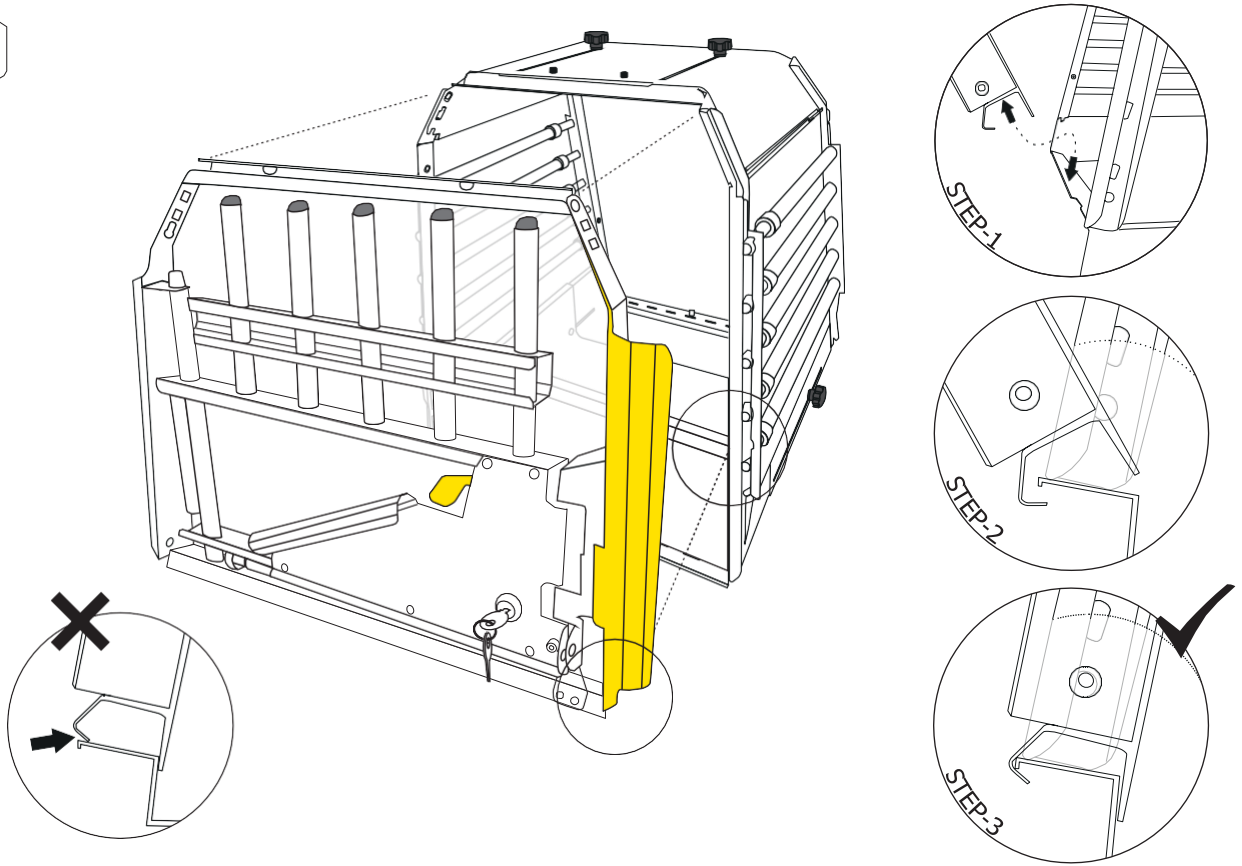


STEP
15

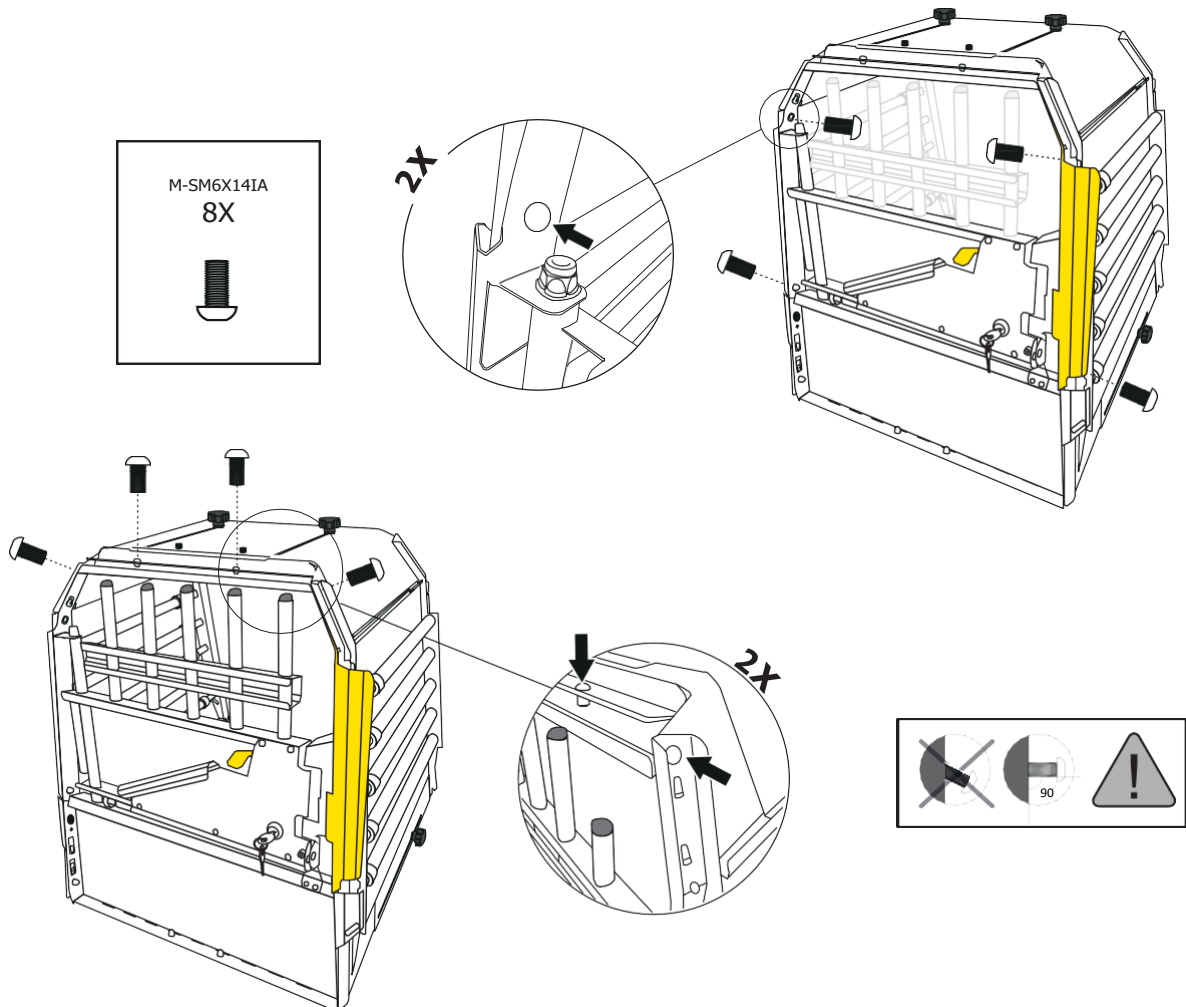


16

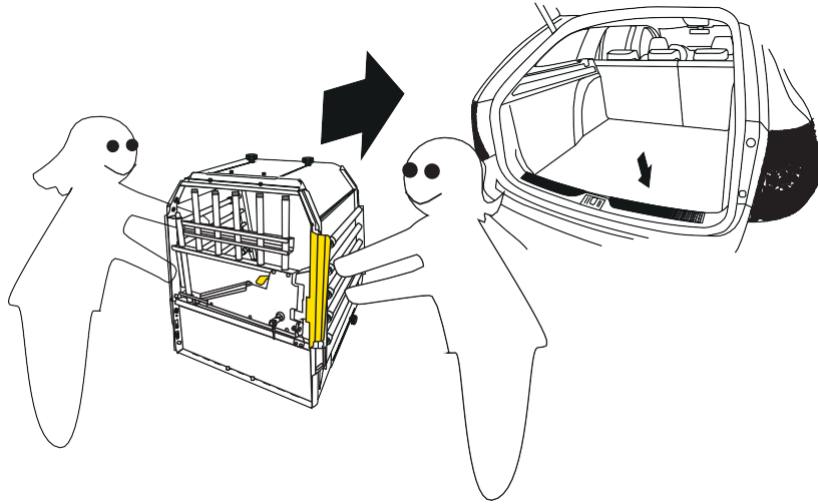

STEP
17

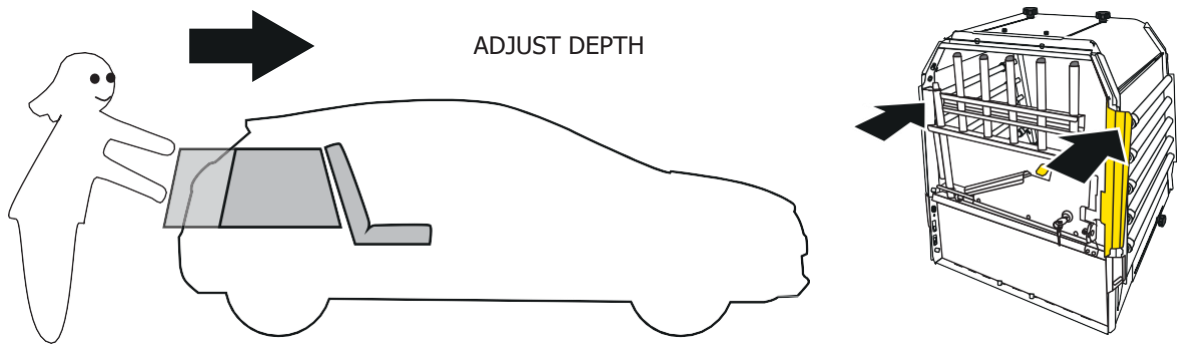


STEP
18

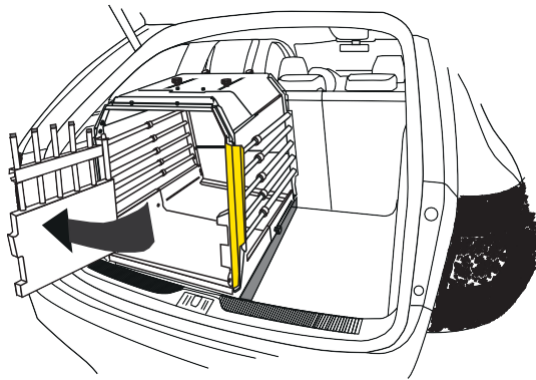


STEP
19


WARNING!

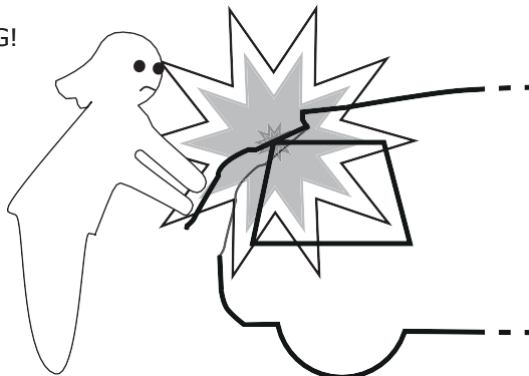


STEP
20

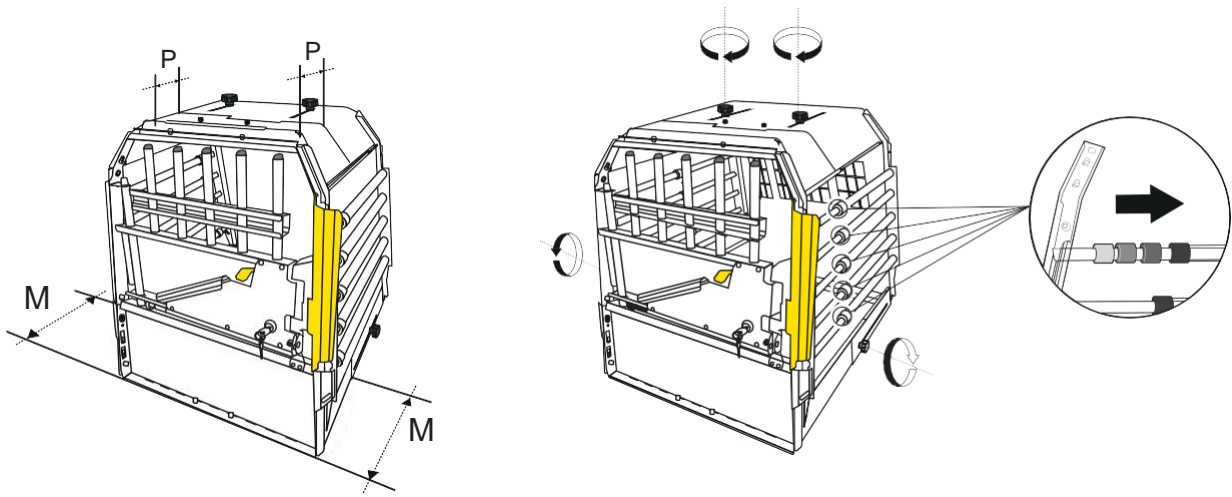


STEP
21

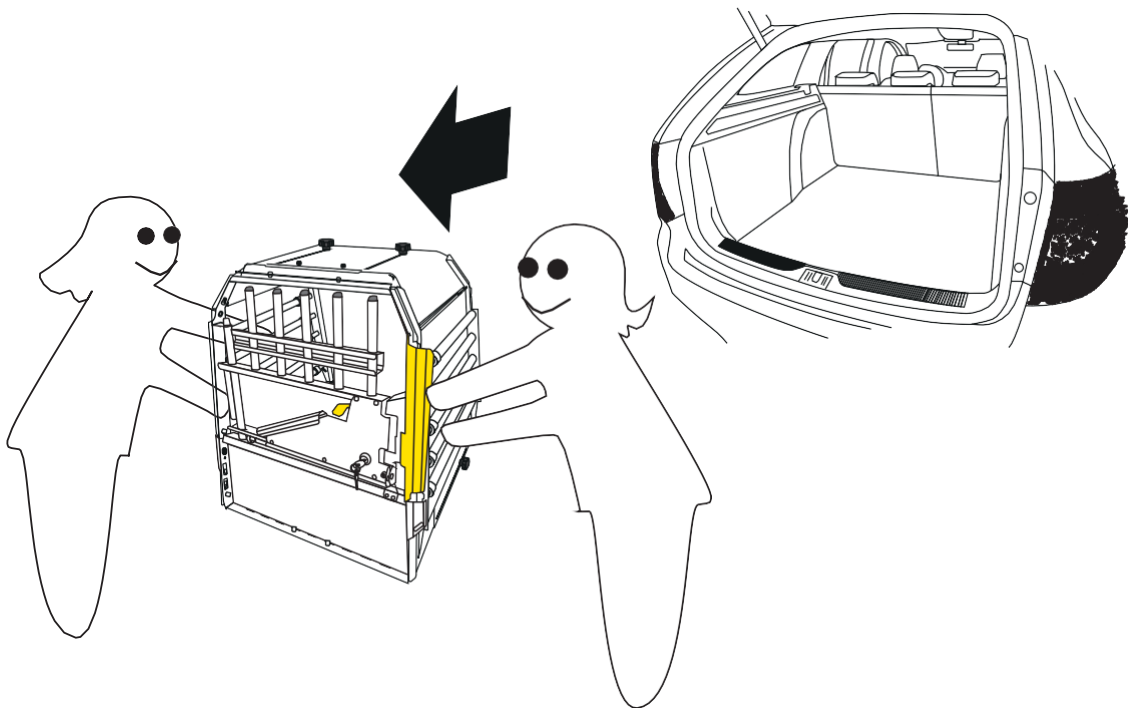



STEP
22

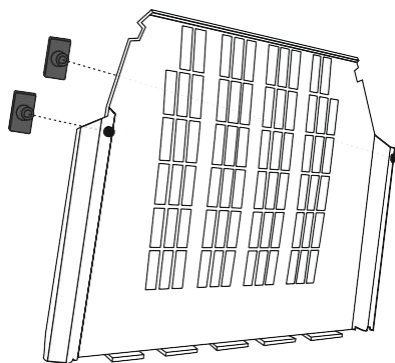

H Escape Hatch

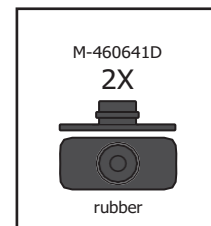


23

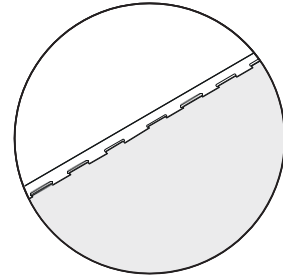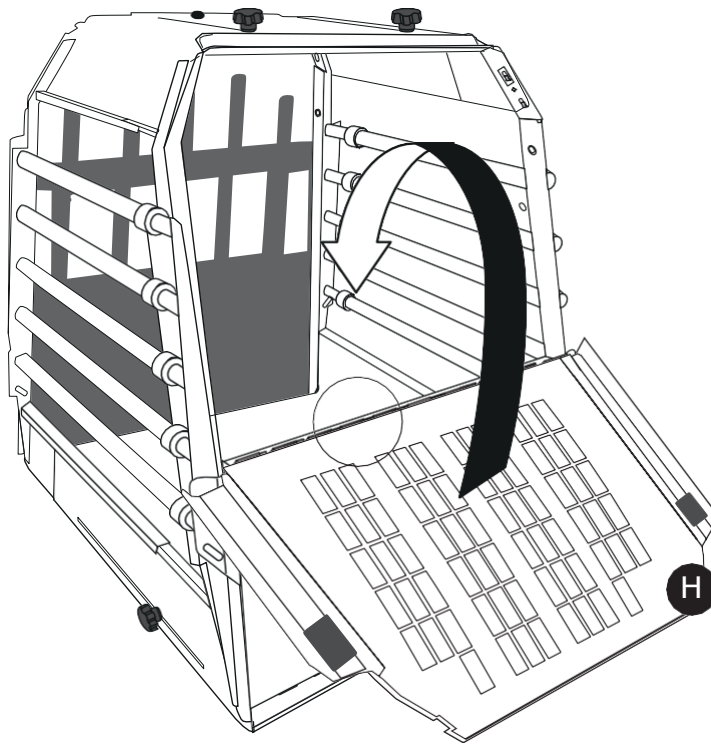

H Escape Hatch


STEP
24

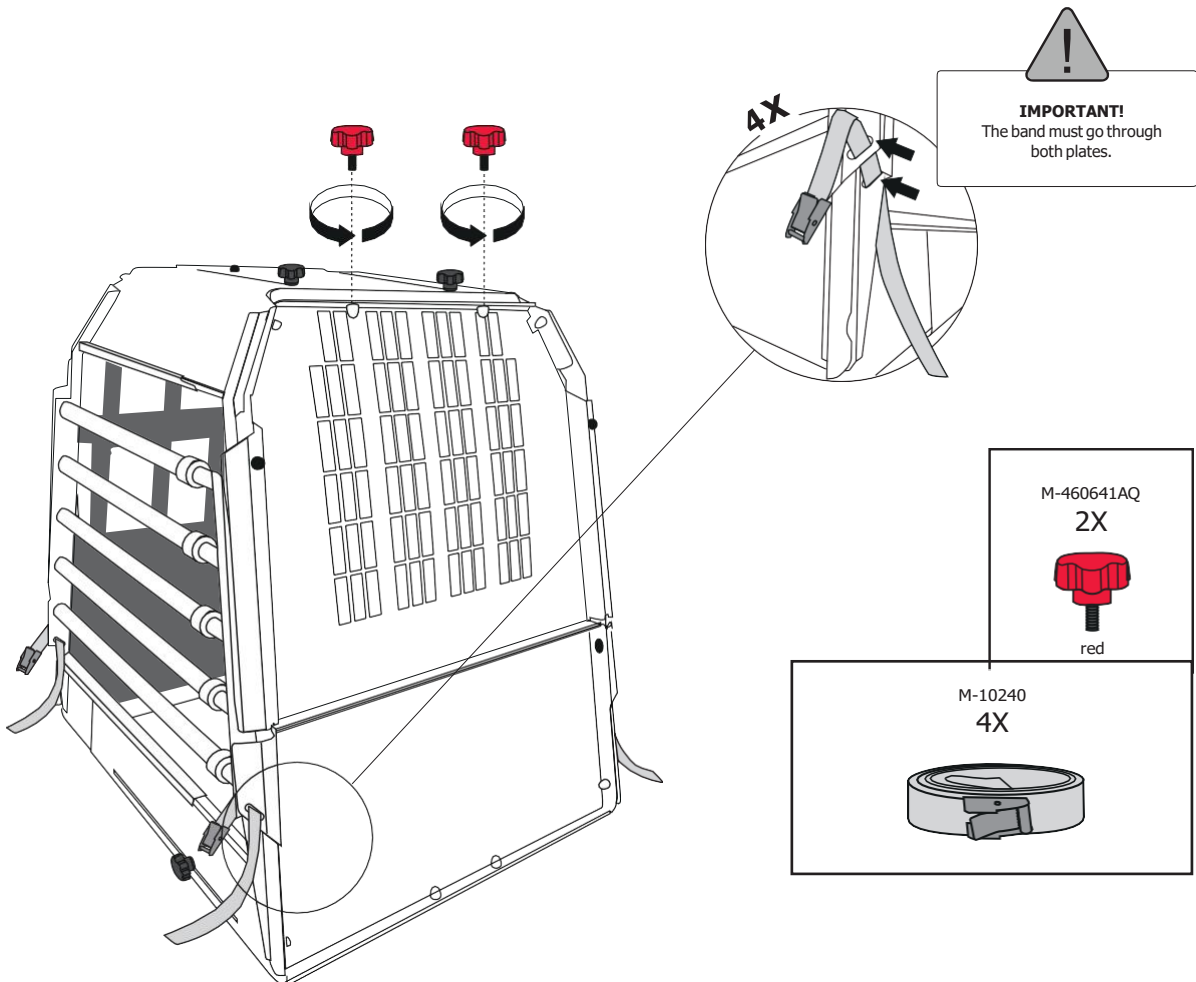

!
IMPORTANT!
The band must go through
both plates.

- M-460641AQ
2X
red
- M-10240
4X

25

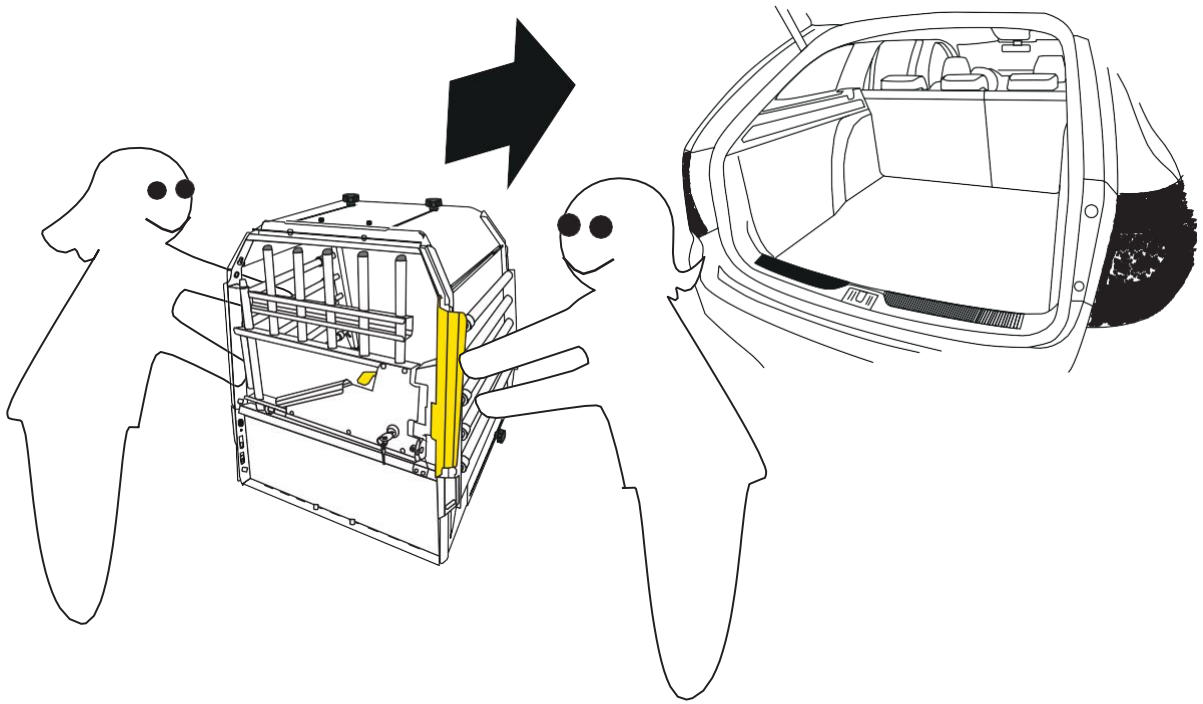

STEP
26

