


Lining installation

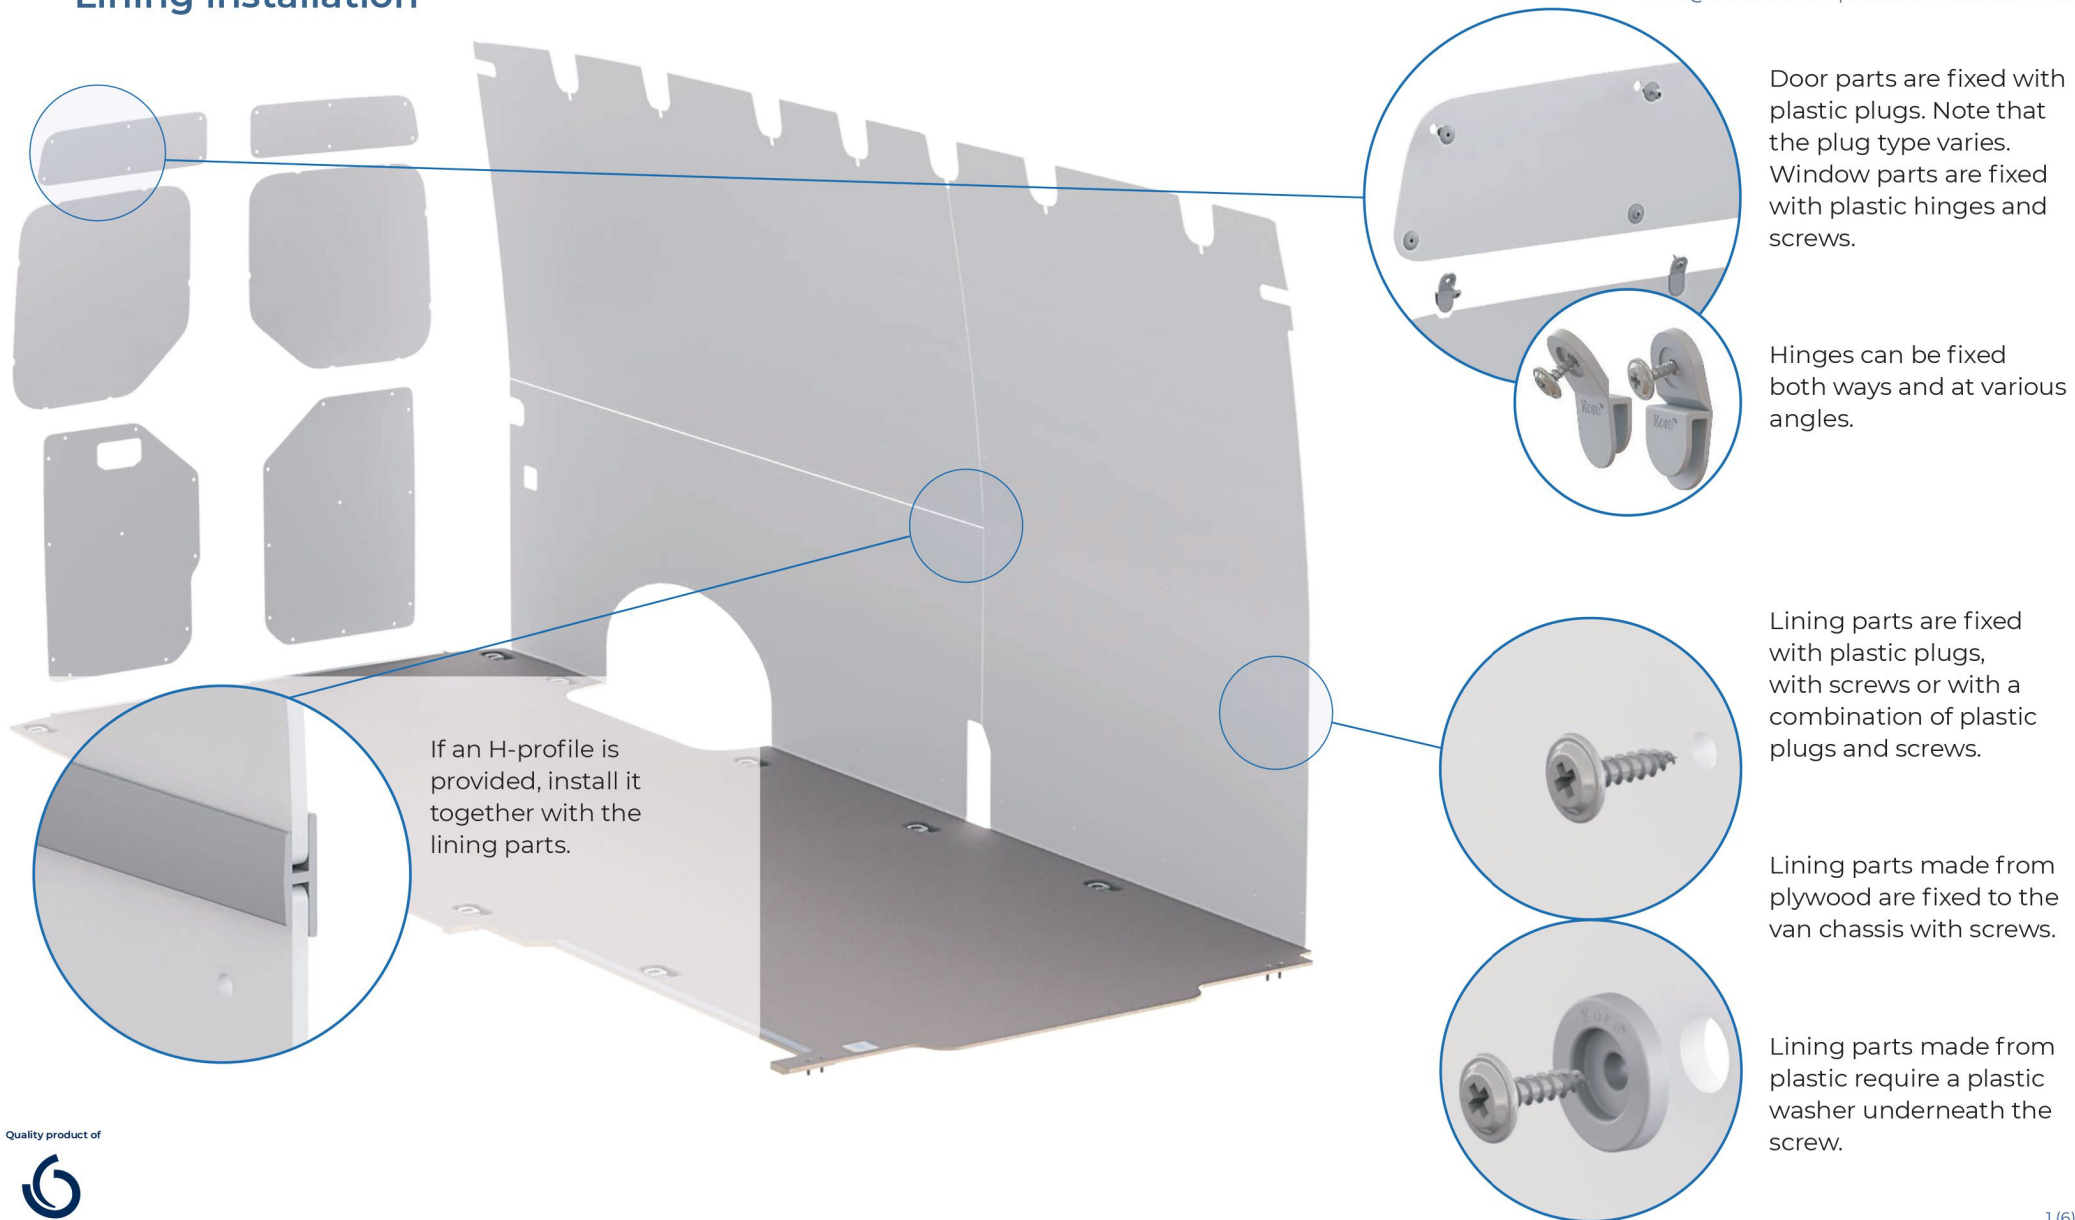

If an H-profile is provided, install it together with the lining parts.

Door parts are fixed with plastic plugs. Note that the plug type varies. Window parts are fixed with plastic hinges and screws.



Hinges can be fixed both ways and at various angles.

Lining parts are fixed with plastic plugs, with screws or with a combination of plastic plugs and screws.

Lining parts made from plywood are fixed to the van chassis with screws.

Lining parts made from plastic require a plastic washer underneath the screw.

Lining installation

- » Please make sure that you have the correct parts and accessories for your van model.
- » Remove the original panels if necessary.
- » Use compatible tools to assembly all the accessories.
- » Use only original Kore accessories for your linings.
- » Install in accordance with the lining drawing.
- » Make sure that parts correctly fit your van before final fixing.
- » Install the parts so that there are even gaps between the panels and the van chassis, and the linings fit evenly around the wheel arches.
- » When using screws, start fixing the wall panels from the middle and continue towards the edges and corners.
- » Make sure not to damage any electrical cables etc. whilst fixing the parts.
-  » Check the run of the cables before starting installation.
-  » Remember to use appropriate length screws to avoid damage by drilling through the van body.
- » If you need more support, please contact your distributor or the Kore Service Center.