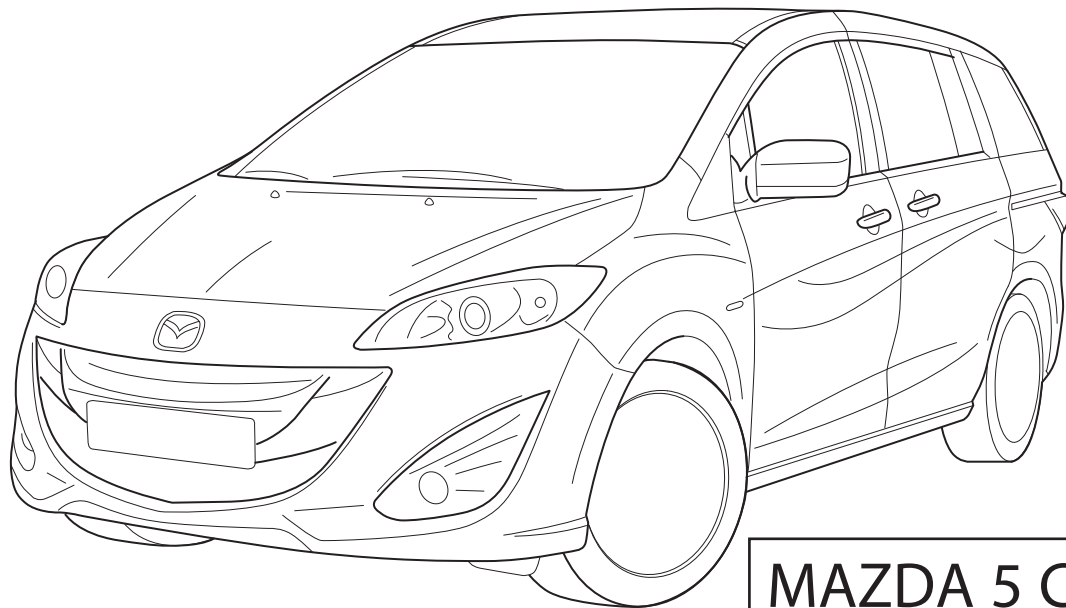



GB SUNBLINDS Installation instruction	N SOLBESKYTTELSESSKJERM Monteringsveiledning
D SONNENSCHUTZBLLENDE Einbauanleitung	S SOLSKYDD Monteringsanvisning
E PANTALLA SOLAR Instrucciones de montaje	SF AURINKOLIPPA Asennusohje
F RIDEAU Notice de montage	CZ SLUNEČNÍ CLONA Návod k montáži
I VISIERA PARASOLE Istruzioni di montaggio	H NAPELLENZŐ Beszerelési utasítás
P PALA DE SOL Instruções de montagem	PL OSŁONA PRZECIWSŁONECZNA Instrukcja zabudowy
NL ZONNESCHERM Inbouw-instructie	GR Αλεξήλιο Οδηγίες τοποθέτησης
DK SOLSKÆRM Monteringsvejledning	RUS ШТОРКА СОЛНЦА Инструкция по установке

**MAZDA 5 CR1**

Part Number: 0078237A


Date: 05.07.2016

A

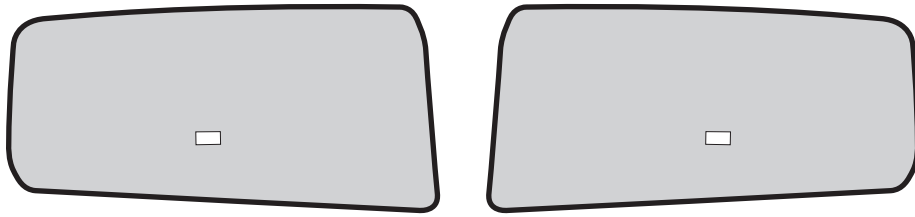


1x

B

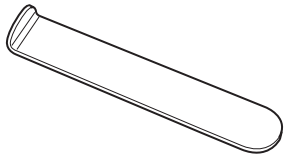

1x

C

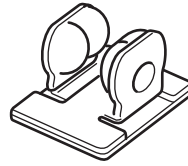




4x

D




6x


Subject to alteration without notice
 Technische Änderungen vorbehalten
 Reservadas modificaciones técnicas
 Sous réserve de modifications techniques
 Con riserva di apportare modifiche tecniche
 Reservamo-nos o direito a alterações técnicas
 Technische wijzigingen voorbehouden
 Med forbehold for tekniske Índringer
 Tekniske forendringer forbeholdes
 Med reservation för tekniska ändringar
 Tekniset muutokset pidätetään
 Technické zmeny vyhrazeny
 A változtatások technika jogát fenntartjuk
 Zmiany techniczne zastrzeżone
 Επιφύλασσόμεθα για αλλαγές
 Можно изменять без уведомления

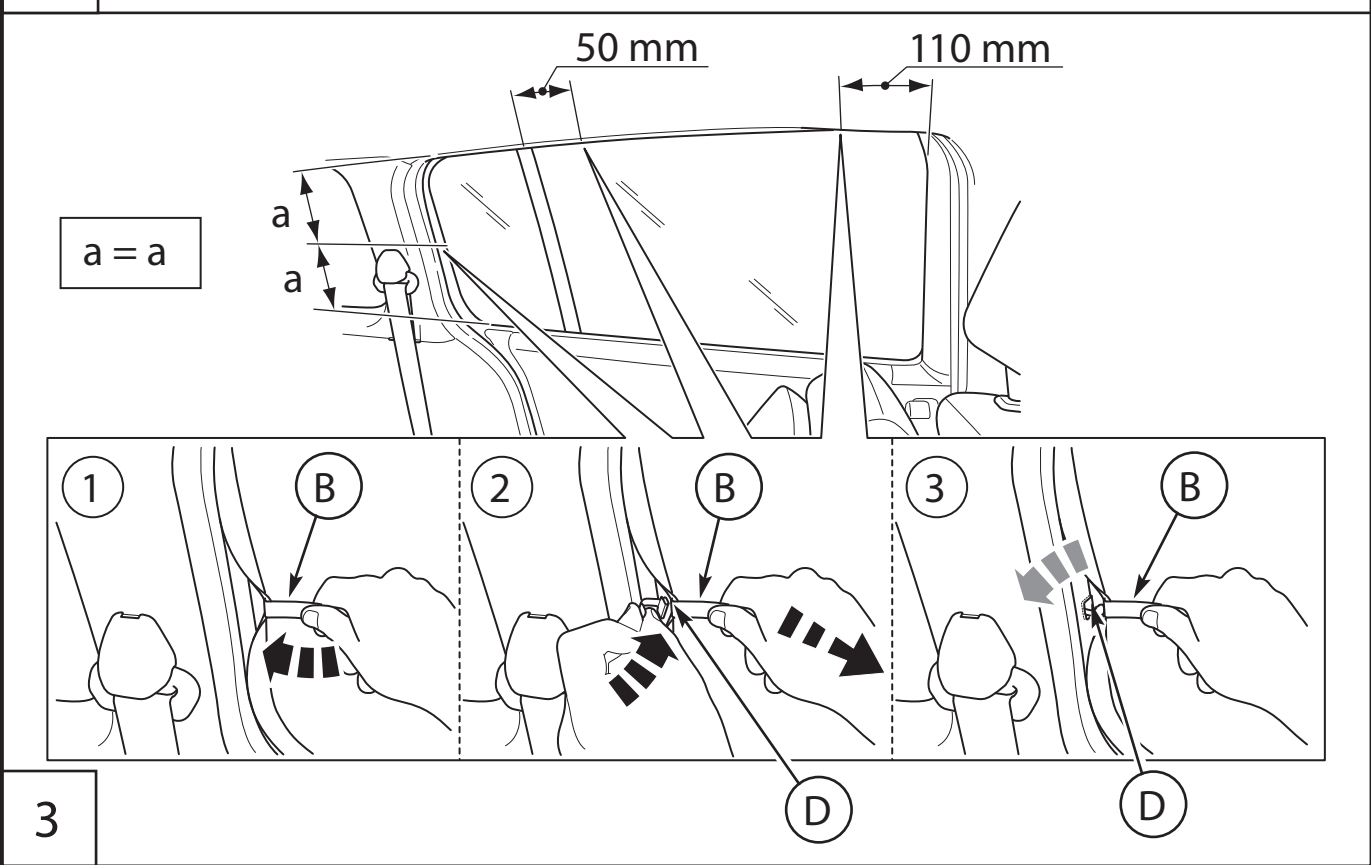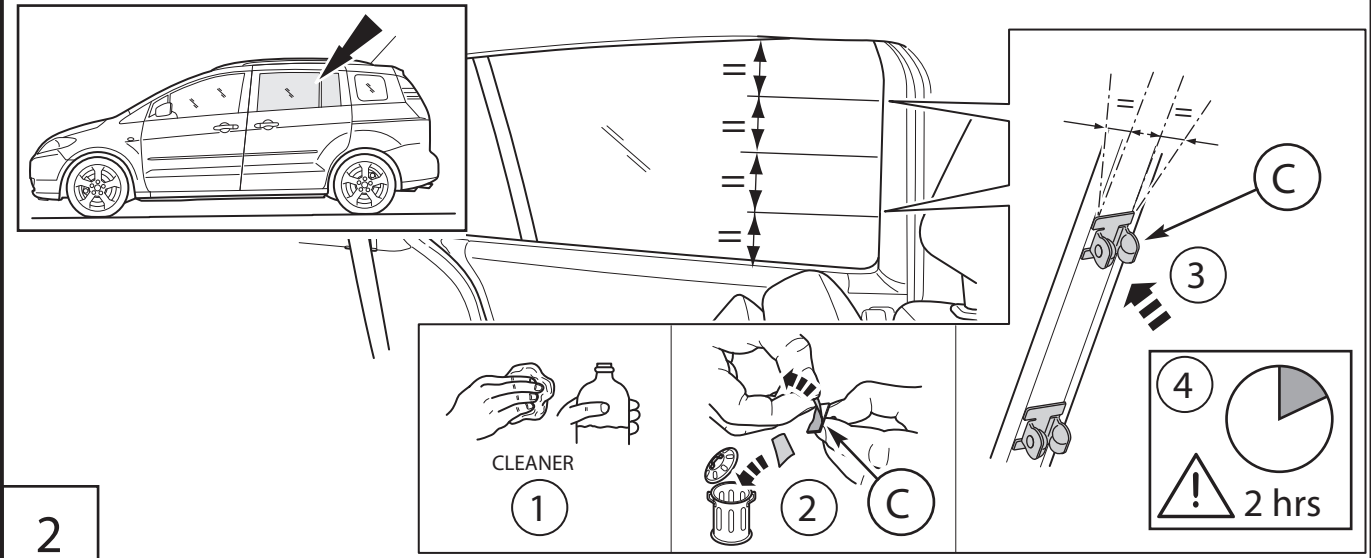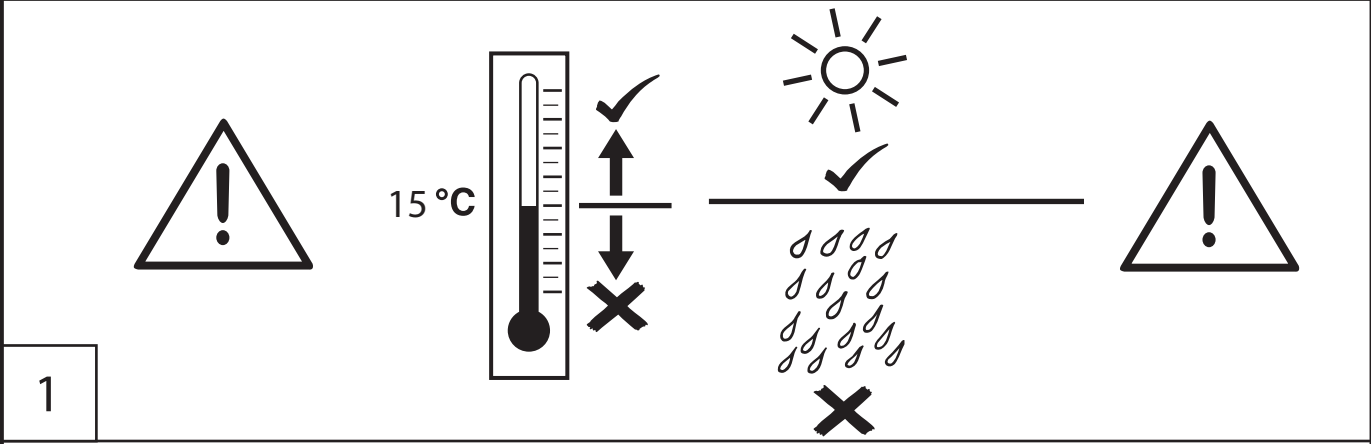


077950 WaCo 07/2016

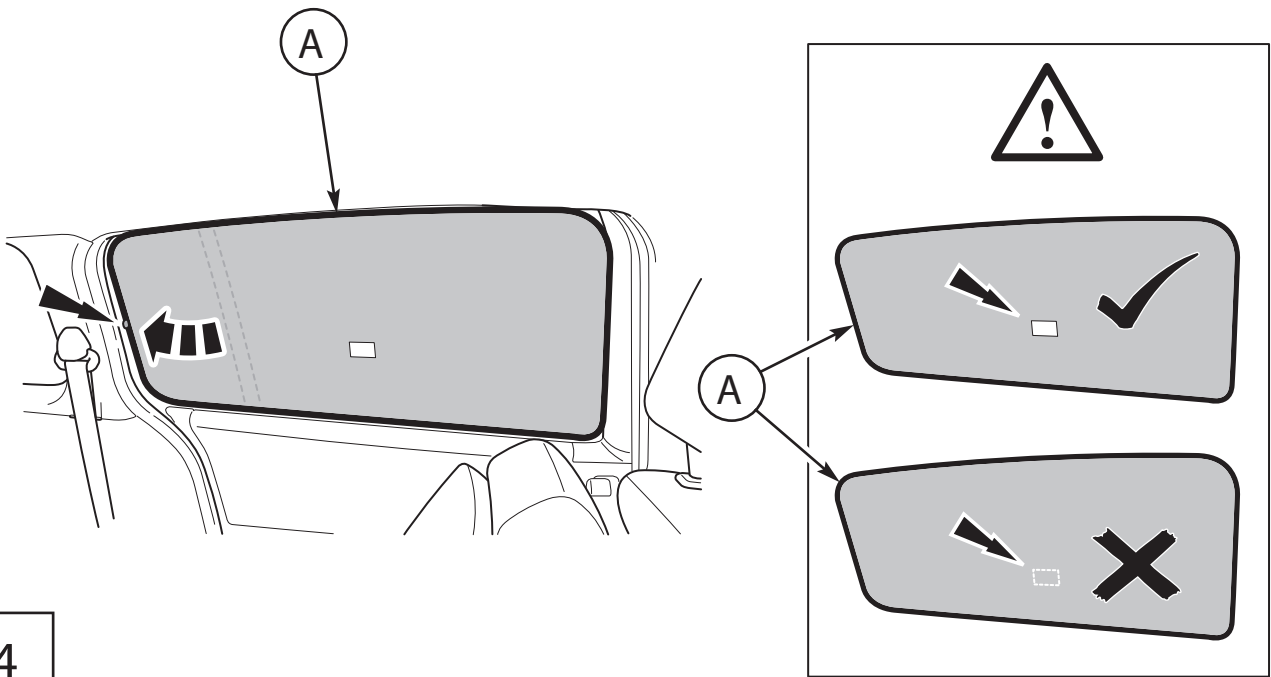

4

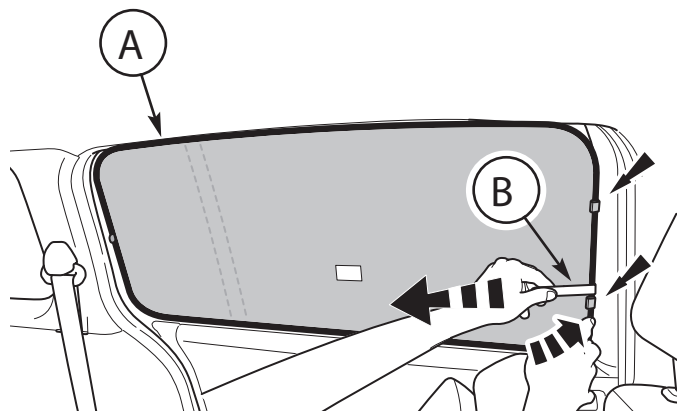

5

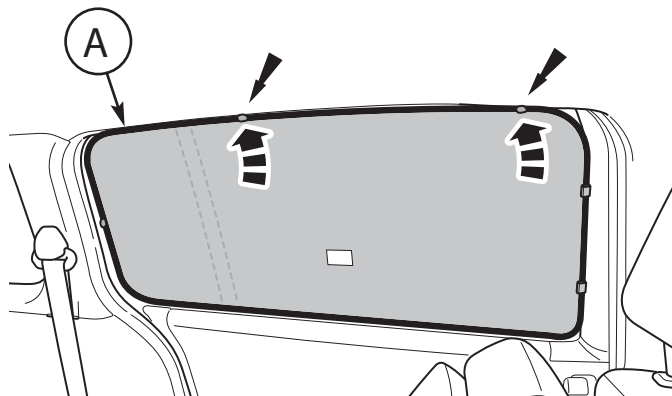

6