
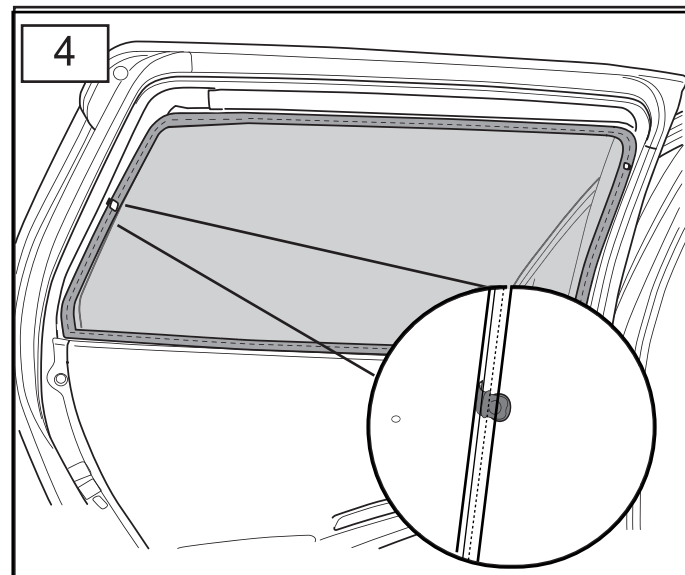
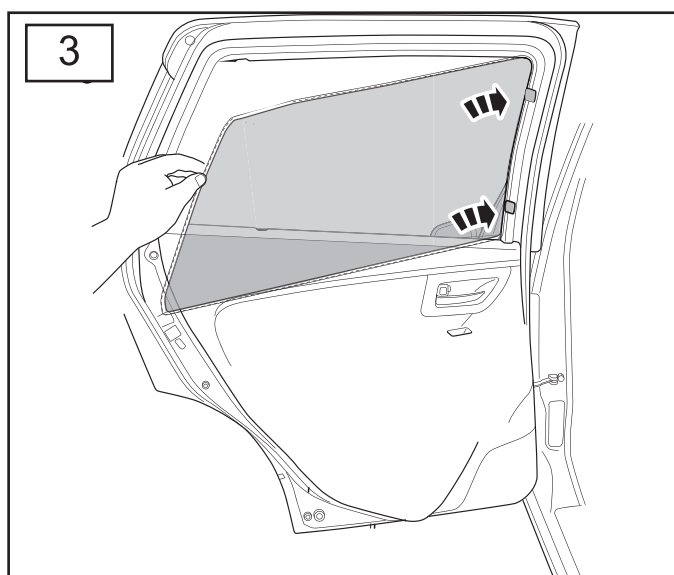
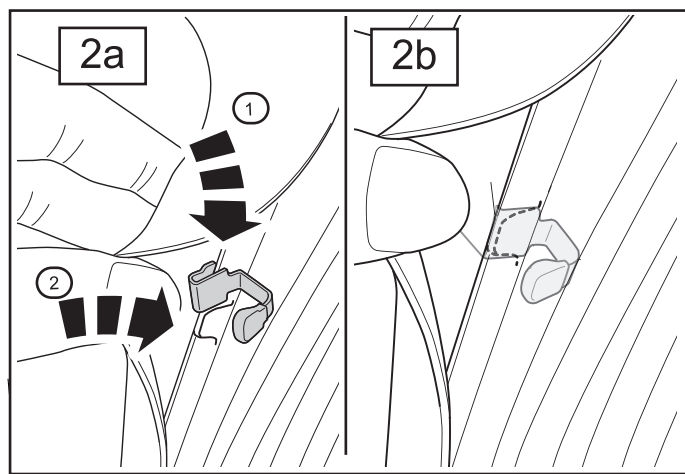
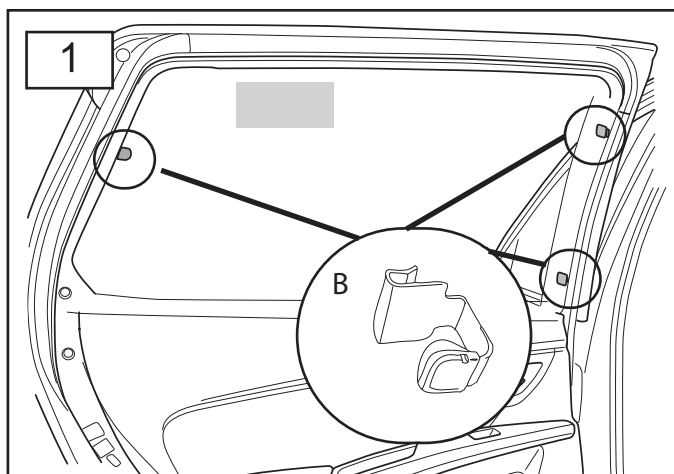










0078387ABC

ClimaAir[®] car comfort

- D Einbauanleitung
- GB Installation instructions
- F Consignes de montage
- E Instrucciones de montaje
- RUS Инструкция по монтажу и установке

Suzuki Baleno ab 2015-

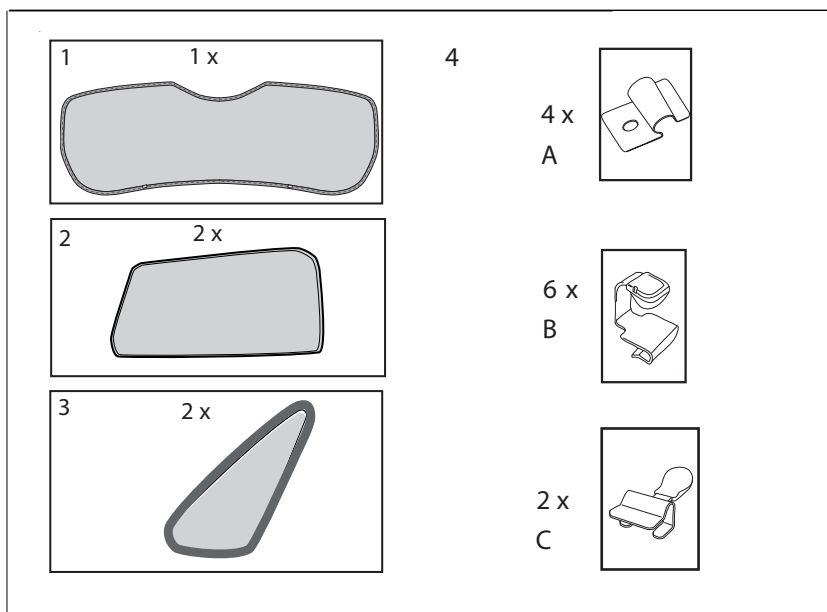

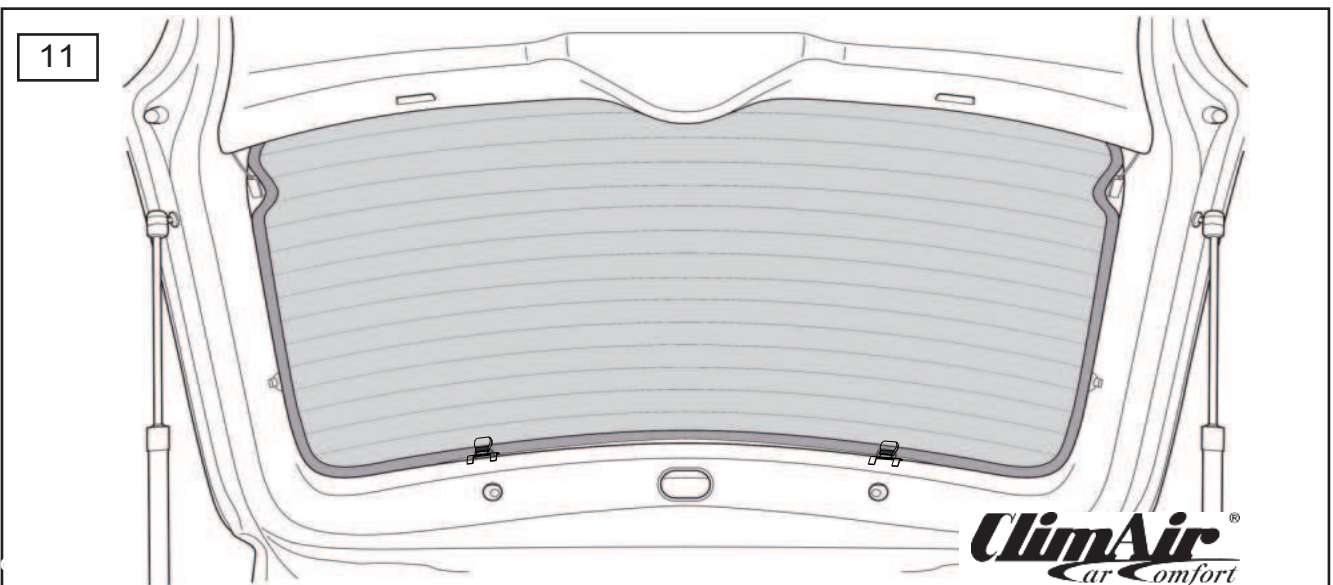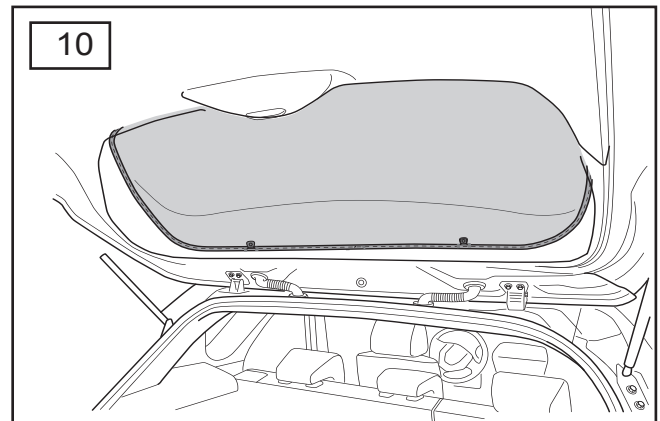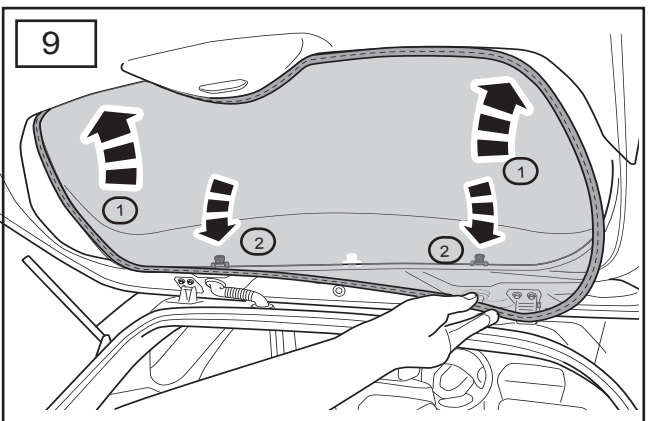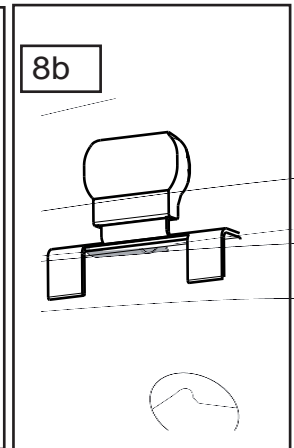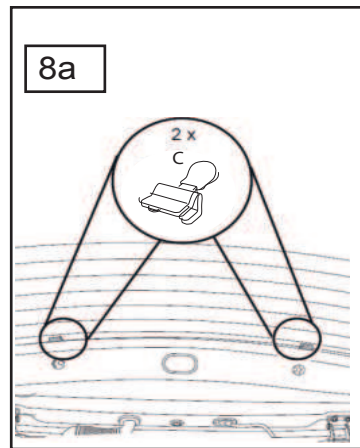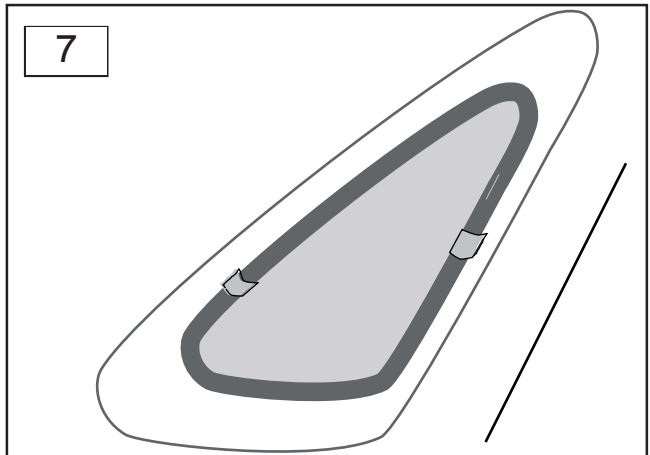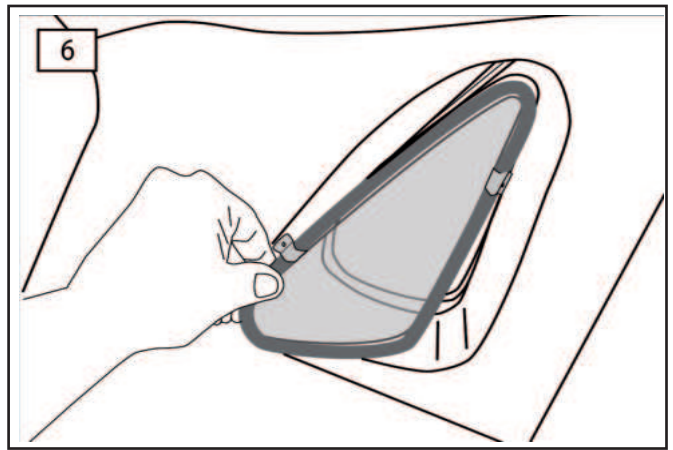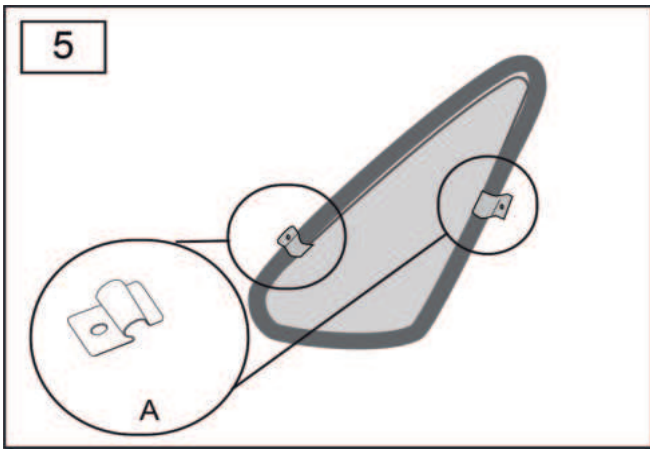

ClimAir
car comfort

PLAVA Kunststoffe GmbH
Am Spitzacker 20 - 22 - 61184 Karben
Telefon: +49(0)6039 - 9 16 3-0
Fax: +49(0)6039 - 21 85
info@climair.de - www.climair.de