

# VW T-Cross 2018-



Part Number: 10075s-a

Date: 15-01-2020

PLAVA Kunststoffe GmbH  
Am Spitzacker 22 - 61184 Karben

Sheet 1 of 4

© Copyright Windesa GmbH


<b>GB</b> Car darkening set doors Installation Instruction	<b>N</b> Bilvinduet missfarging dører Installasjonsveiledning
<b>D</b> Autoscheibenverdunklung Türen Einbauanleitung	<b>S</b> Bilrutan nyanserings dörrar Monteringsanvisning
<b>E</b> Ventana de coche puertas de tintado Instrucciones de instalación	<b>SF</b> Auton ikkunasta sävytystä ovet Asennusohjeet
<b>F</b> Portes teinter fenêtre de voiture Instructions d'installation	<b>CZ</b> Okno auto tónování dveře Pokyny k instalaci
<b>I</b> Finestrino della macchina porte colorazione Istruzioni per l'installazione	<b>H</b> Autó Ablakszínezés ajtók Szerelési útmutató
<b>P</b> Portas tintométrico janelas do carro Instruções de instalação	<b>PL</b> Drzwi okienne samochod barwiących Instrukcje instalacji
<b>NL</b> Auto raam verven deuren Installatie-instructies	<b>GR</b> Παράθυρο του αυτοκινήτου πόρτες χρωματισμού Οδηγίες εγκατάστασης
<b>DK</b> Bil vindue toning døre Monteringsvejledning	<b>RUS</b> Окрашивание двери окна автомобиля Инструкция по монтажу





2x



6x

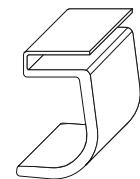

SC3-40

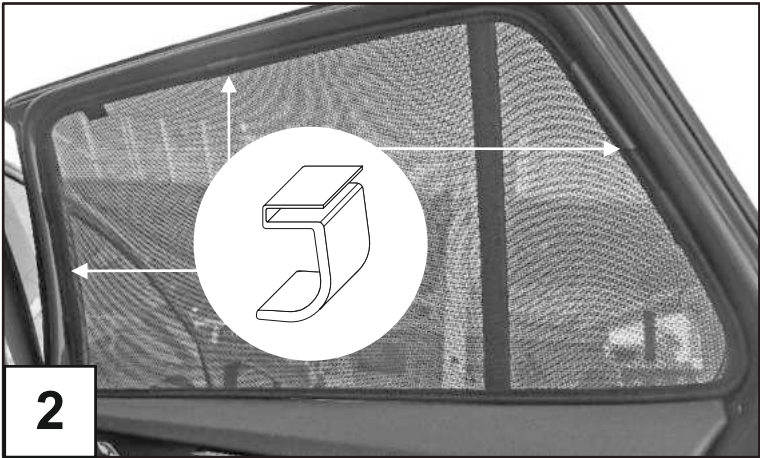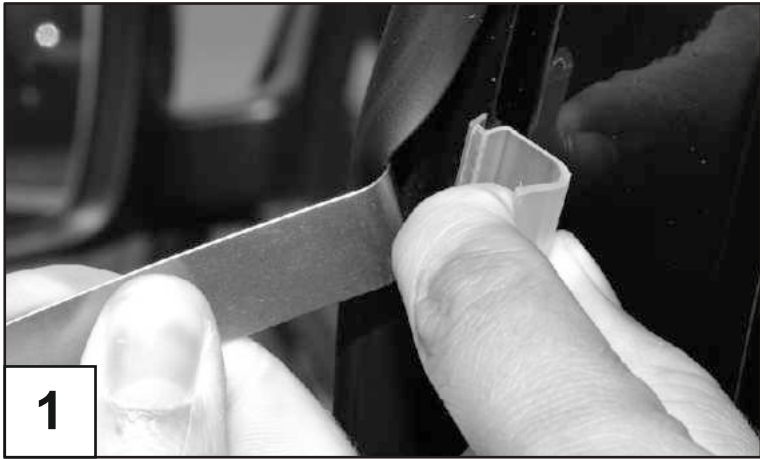

# VW T-Cross 2018-

**ClimAir**  
Car Comfort

Part Number: 10075s-a

Date: 15-01-2020

PLAVA Kunststoffe GmbH  
Am Spitzacker 22 - 61184 Karben

Sheet 1 of 4

© Copyright Windesa GmbH

- GB** Car darkening set rear window  
Installation Instruction
- D** Autoscheibenverdunklung Heckfenster  
Einbauanleitung
- E** Teñido de ventana trasera ventanilla del coche  
Instrucciones de instalación
- F** Fenêtre arrière teinter fenêtre de voiture  
Instructions d'installation
- I** Finestra colorazione lunotto auto  
Istruzioni per l'installazione
- P** Tingimento de janela traseira janela do carro  
Instruções de instalação
- NL** Autoruit raam verven achter  
Installatie-instructies
- DK** Vindue toning bageste bil vindue  
Monteringsvejledning

- N** Bilvinduet vindu missfarging bak  
Installasjonsveiledning
- S** Biffönstret nyanser bakruta  
Monteringsanvisning
- SF** Auton ikkuna sävytystä takalasin  
Asennusohjeet
- CZ** Okno auto okno tónování zadních  
Pokyny k instalaci
- H** Autó Ablakszínezés hátsó ablak  
Szerelési útmutató
- PL** Okna samochodu tylnie okno barwienia  
Instrukcje instalacji
- GR** Παράθυρο του αυτοκινήτου φιμέ τζάμια πίσω  
Οδηγίες εγκατάστασης
- RUS** Окна автомобиля тонировка заднего стекла  
Инструкция по монтажу



1x



2x



SC8-20-7

