

**Installation Manual**

**CARGOBLOCK**

**The load compartment door  
protection for commercial vehicles**



**CARGOBLOCK Cod. 0001070001202**



**Fiat Ducato**



**Peugeot Boxer**

The objective of this Handbook is to provide guidelines and information for a correct installation of **CargoBlock** on a commercial vehicle.

It is advisable to carefully follow all the procedures contained in this manual, essential to correctly install the anti-theft device.

**Attention: the information given here** are made available by the Services Department and are indicative. They require a post-installation verification.

**StarBlock disclaims all liability for any damage incurred to the vehicle for incorrect installation or for failure to follow instructions**

## **GENERAL INFORMATION**

CargoBlock installation has been tested on vehicles following assembly instructions which are analyzed in this guide

Product warranty registration is required on the website:

**[www.starblock.it](http://www.starblock.it)**

## TECHNICAL FEATURES

It is the anti-theft device for the rear and side doors of commercial vehicles.

Reliable for its light alloy composition. It is made of aluminum with **preformed** and **pre-drilled** stainless steel plates.

Thanks to its design and technology it is practical and **easy to install**.

It is equipped with plates dedicated to the fixing system of each vehicle. No holes and no changes are made on the doors, the burglar alarm is installed on the lock studs.

CargoBlock is equipped with **StarBlock®** lock with proprietary technology and non-duplicable profile key.

Patent n° **202016000071343**

## MAINTENANCE

The maintenance of the product concerns only the periodic cleaning of the lock, through the use of compressed air in the lock hole to eliminate any deposits of dust and lubricating spray

Maintenance is recommended every six months or more frequently if you work in environments where dust, sand or other similar material is high

## BOX CONTENTS

1. Right side rear door plate



2. Rear door fixing plate left side



3. Side sliding door plate



4. Side door fixing plate



5. Accessory: stud M6x25



6. 3 Hexagonal screws 6x16mm



## INSTALLATION GUIDANCE

### 1– Rear door right side

- Unscrew the torx screw that secures the lock;
- Screw the M6x25 stud to prevent the lock from detaching during installation, then unscrew the two torx screws (img. 1);
- Place the rear door plate on the right side at the fixing holes of the lock and screw the two original torx screws (img. 2);
- Unscrew the stud and screw the other torx screw of the lock (do not screw the screws completely for final adjustment of the plate).



img.1



img.2

### 2– Rear door left side

- Before unscrewing the hook, trace its original position with a marker (to facilitate the reassembly operation). Finally unscrew the two torx screws that fix the hook (img. 3);
  - Place the rear door fixing plate on the left side, replace the hook and screw the two torx screws.
- Attention: do not squeeze the gasket between the edges of the door and the plate and do not completely screw the screws for the final adjustment of the plate (img. 4);
- Bring the two ports closer together and check that the plates are aligned. Then tighten all the screws tightly (img. 5).



img.3



img.4



img.5

## 3- Side sliding door plate

- Unscrew and remove the torx screw that secures the lock and screw the stud to prevent the lock from detaching during installation (img. 6);
- Unscrew and remove the other two torx screws;
- Place the side sliding door plate at the holes and tighten the two screws supplied (img. 7);
- Unscrew the stud and screw the other screw supplied (do not screw the screws completely for the final adjustment of the plate).



img.6




img.7

## 4- Side door fixing plate


- Before unscrewing the hook, trace its original position with a marker (to facilitate the reassembly operation). Finally unscrew the two torx screws that fix the hook (img. 8);
  - Place the side door fixing plate at the holes and reposition the hook in its original layout;
  - Secure the two torx screws (do not screw the screws completely for the final adjustment of the plate) (img. 9);
  - Bring the two doors closer together and check that the plates are aligned (img. 10).
- After that, tighten all the screws tightly.



img.8

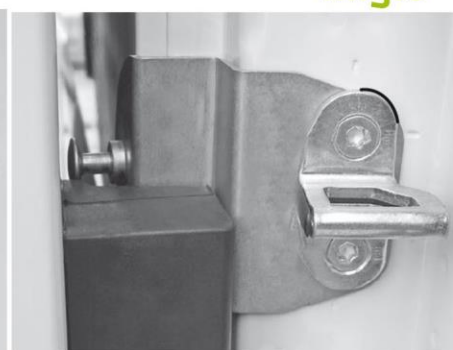

img.9

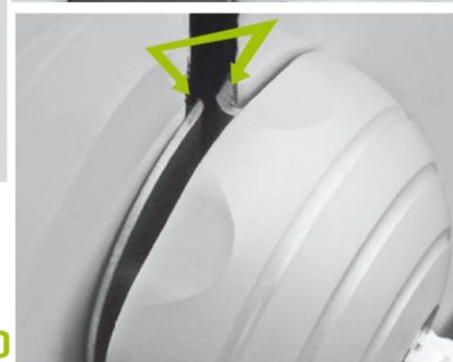

img.10



**ST AUTOMOTIVE SRL**  
**Ss 96 Strada Vicinale**  
**Lamarossa snc - 70026 Modugno (BA)**  
**T. +39 080 2143503 - F. +39 080 9692317**  
**[info@starblock.it](mailto:info@starblock.it)**



**starblock.it**