

Installation Manual

CARGOBLOCK

**The anti-theft for light commercial
vehicles' rear and side doors**



CARGOBLOCK Cod. 0001070001702



Renault Master



Opel Movano

A– INTRODUCTION

The purpose of this Handbook is to provide guidelines for a correct installation of **CargoBlock** on a commercial vehicle.

It is advisable to carefully follow all the procedures contained in this manual, essential to correctly install the anti theft device.

Attention: information given below are made available by the Services Department and are indicative. They always require a post installation verification.

StarBlock disclaims all liabilities for any damage incurred to the vehicle for incorrect installation or for failure to follow instructions

B– GENERAL GUIDELINES

CargoBlock installation has been tested on vehicles following assembly instructions which are analyzed in this guide.

Product warranty registration is required on the website:

www.starblock.it

C- TECHNICAL FEATURES

It is the anti theft device for the rear and side doors of light commercial vehicles.

Reliable for its light alloy composition. It is made of aluminum with **preformed** and **pre-drilled** stainless steelplates.

Thanks to its design and technology it is practical and easy to install. It is equipped with plates dedicated to the fixing system of each vehicle.

No holes and no changes are made on the doors. The device is installed on the lock studs.

CargoBlock is equipped with **StarBlock®** lock with proprietary technology and non duplicable profile key.

Patent n° **202016000071343**

D- MAINTENANCE

The maintenance of the product concerns only the periodic cleaning of the lock, through the use of compressed air in the lock hole to eliminate any deposits of dust and lubricating spray.

Maintenance is recommended every six months or more frequently if you work in environments where dust, sand or other similar material are high.

E - BOX CONTENTS

1. Rear door plate right side;




2. Rear door fixing plate, right side



3. Side sliding door plate



4. Side door fixing plate

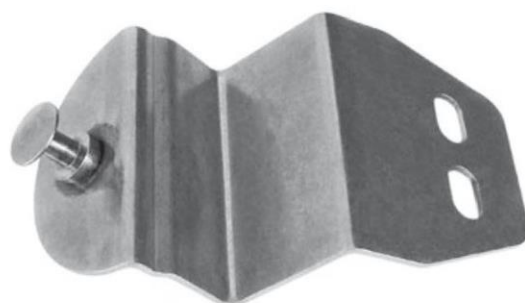

5. Accesory: stud diameter 6mm



F– INSTALLATION GUIDE

1– Rear door, right side

- Unscrew the torx screw securing the lock;
- Tighten the 6 mm diameter stud to prevent the lock from detaching during installation, then unscrew the two torx screws (**img. 1**);
- Position the rear door plate on the right-hand side at the lock fixing holes and secure with the two torx screws (**img. 2**);
- Unscrew the stud and tighten the lock screw (do not tighten the screws completely for final adjustment of the plate).



2– Rear door, left side

- Unscrew the two torx screws securing the tailgate hook bracket (**img. 3**);
- Position the rear door fixing plate on the left-hand side. **Caution:** do not pinch the gasket between the edges of the door and the plate (**img. 4**);
- Fasten the plate with the two original torx pins (do not tighten the screws completely for final adjustment of the plate);
- Align the two doors and check that the plates are aligned. Then tighten all screws securely (**img. 5**).



img.3

img.4

img.5

3- Side sliding door plate


- Unscrew the torx screw that fastens the lock and screw in the stud to prevent the lock from coming loose during installation (**img. 6**).
- Unscrew the other two torx screws;
- Position the side sliding door plate at the holes and tighten the two torx screws (**fig. 7**);
- Unscrew the stud and tighten the other torx screw (do not tighten the screws completely for final adjustment of the plate).



4- Side door fixing plate

- Unscrew the two torx screws securing the hook to the vehicle door;
- Remove the spacer located behind the lock hook (**img. 8**);
- Position the side door fixing plate at the holes and reposition the hook in its original position;
- Fix the two torx screws (do not tighten the screws completely for final adjustment of the plate) (**img. 9**);
- Apply the two doors and check that the plates are aligned (**img. 10**). Then tighten all screws.

img.9

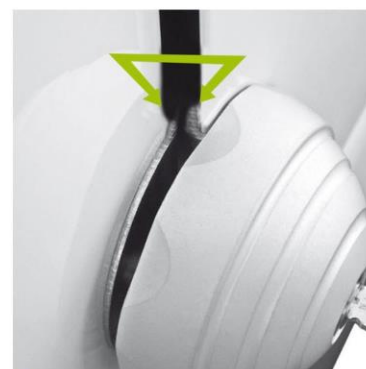



ST AUTOMOTIVE SRL
Ss 96 Strada Vicinale
Lamarossa snc - 70026 Modugno (BA)
T. +39 080 2143503 - F. +39 080 9692317
info@starblock.it



starblock.it