

Installation Manual

CARGOBLOCK

**The anti-theft for light commercial
vehicles' rear and side doors**



CARGOBLOCK Cod. 0001070002002



Ford Transit

A – INTRODUCTION

The aim of this Handbook is to provide guidelines for a correct installation of CargoBlock on a commercial vehicle.

It is advisable to carefully follow all the procedures contained in this manual, essential to correctly install the anti theft device.

Attention: information given below are made available by the Services Department and are indicative. They always require a post installation verification.

StarBlock disclaims all liabilities for any damage incurred to the vehicle for incorrect installation or for failure to follow Instructions.

B – GENERAL GUIDELINES

CargoBlock installation has been tested on vehicles following Assembly instructions which are analyzed in this guide.

Product warranty registration is required on the website:
www.starblock.it

C- TECHNICAL FEATURES

It is the anti-theft device for the rear and side doors of light commercial vehicles.

Reliable for its light alloy composition. It is made of aluminum with **preformed** and **pre-drilled** stainless steel plates.

Thanks to its design and technology it is practical and easy to install. It is equipped with plates dedicated to the fixing system of each vehicle.

No holes and no changes are made on the doors. The device is installed on the lock studs.

CargoBlock is equipped with **StarBlock®** lock with proprietary technology and non duplicable profile key.

Patent n° **202016000071343**.

D- MAINTENANCE

The maintenance of the product concerns only the periodic cleaning of the lock, through the use of compressed air in the lock hole to eliminate any deposits of dust and lubricating spray.

Maintenance is recommended every six months or more frequently if you work in environments where dust, sand or other similar material are high.

E – BOX CONTENTS

1. Rear door plate, right side;



2. Rear door fixing plate, left side;



3. Side sliding door plate;



4. Side door fixing plate;



5. Six studs M6X20;



6. Accessory: stud M6X25;



7. Scratch-resistant adhesive felt;



F– INSTALLATION GUIDE

1– Rear door, right side

- Unscrew and remove the screw securing the lock (**img 1**);
- Screw in the M6X25 stud to prevent the lock from coming loose during installation, then unscrew the two screws (**img 2**);
- Position the rear door plate on the right side in correspondence with the lock fixing holes (**img 3**);
- -Fasten the plate with the two screws supplied (do not tighten the screws completely for final adjustment of the plate). Unscrew the M6x25 threaded rod and screw in the lock screw.



2- Rear door, left side

- Unscrew the two screws securing the hook on the vehicle door;
- Position the plate at the holes in the door. Caution: do not pinch the gasket between the edges of the door and the plate (**img 4**);
- Fasten the hook and tighten the original screws (do not tighten the screws completely for final adjustment of the plate);
- Bring the two doors together and check that the plates are aligned. Then tighten all screws securely (**img 5**).




3– Side sliding door plate

- Unscrew and remove the screw that fixes the lock and screw in the M6X25 stud to prevent the lock from coming loose during installation, then unscrew the other two screws **(img. 6)**;
- Position the side sliding door plate at the holes and tighten the two screws (do not tighten the screws completely for final adjustment of the plate) **(img. 7)**;
- Unscrew the M6X25 threaded rod and tighten the screw.



4– Side door fixing plate

- Unscrew the two screws securing the hook on the vehicle door;
- Attach the scratch-proof adhesive felt to protect the surface of the vehicle when opening **(img. 8)**;
- Position the plate at the holes and simultaneously position the hook on the plate. Tighten the two original screws (do not tighten the screws completely for final adjustment of the plate);
- Align the two doors and check that the plates are aligned **(img. 9)**, then tighten all screws.

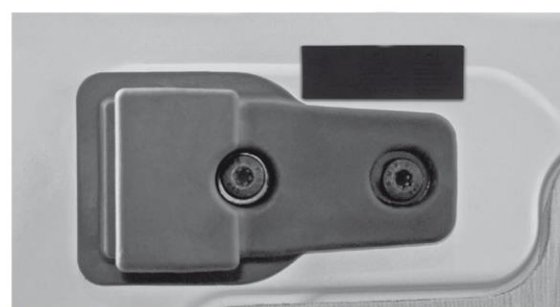

img. 8



img. 9



ST AUTOMOTIVE SRL
Ss 96 Strada Vicinale
Lamarossa snc - 70026 Modugno (BA)
T. +39 080 2143503 - F. +39 080 9692317
info@starblock.it



starblock.it