


# Installation Instructions

**Product name:** DOGWALK3 / DOGWALK3 XL  
**Product description:** dog ramp  
**Parts No.:** 14000865 / XL = 14000875  
**Mounting:** position at the load area of the car with open tailgate  
**Usability:** entry and exit ramp for dogs  
**Type and design:** aluminium telescopic ramp with non-skid surface  
**Load capacity:** max. 85 kg on four paws  
**Dimensions:** width 41 cm, length from 73 to 163 cm, telescopic  
 XL = width 41 cm, length from 83 to 193 cm, telescopic

kleinmetall GmbH  
 Hainstraße 52  
 63526 Erlensee  
 Telefon 06183.91120-0  
 Fax 06183.72152  
 E-Mail info@kleinmetall.de  
 www.kleinmetall.de

**Please read these instructions carefully and keep them in a safe place at home.  
 Before each use, ensure safe positioning of your dog entry ramp!**

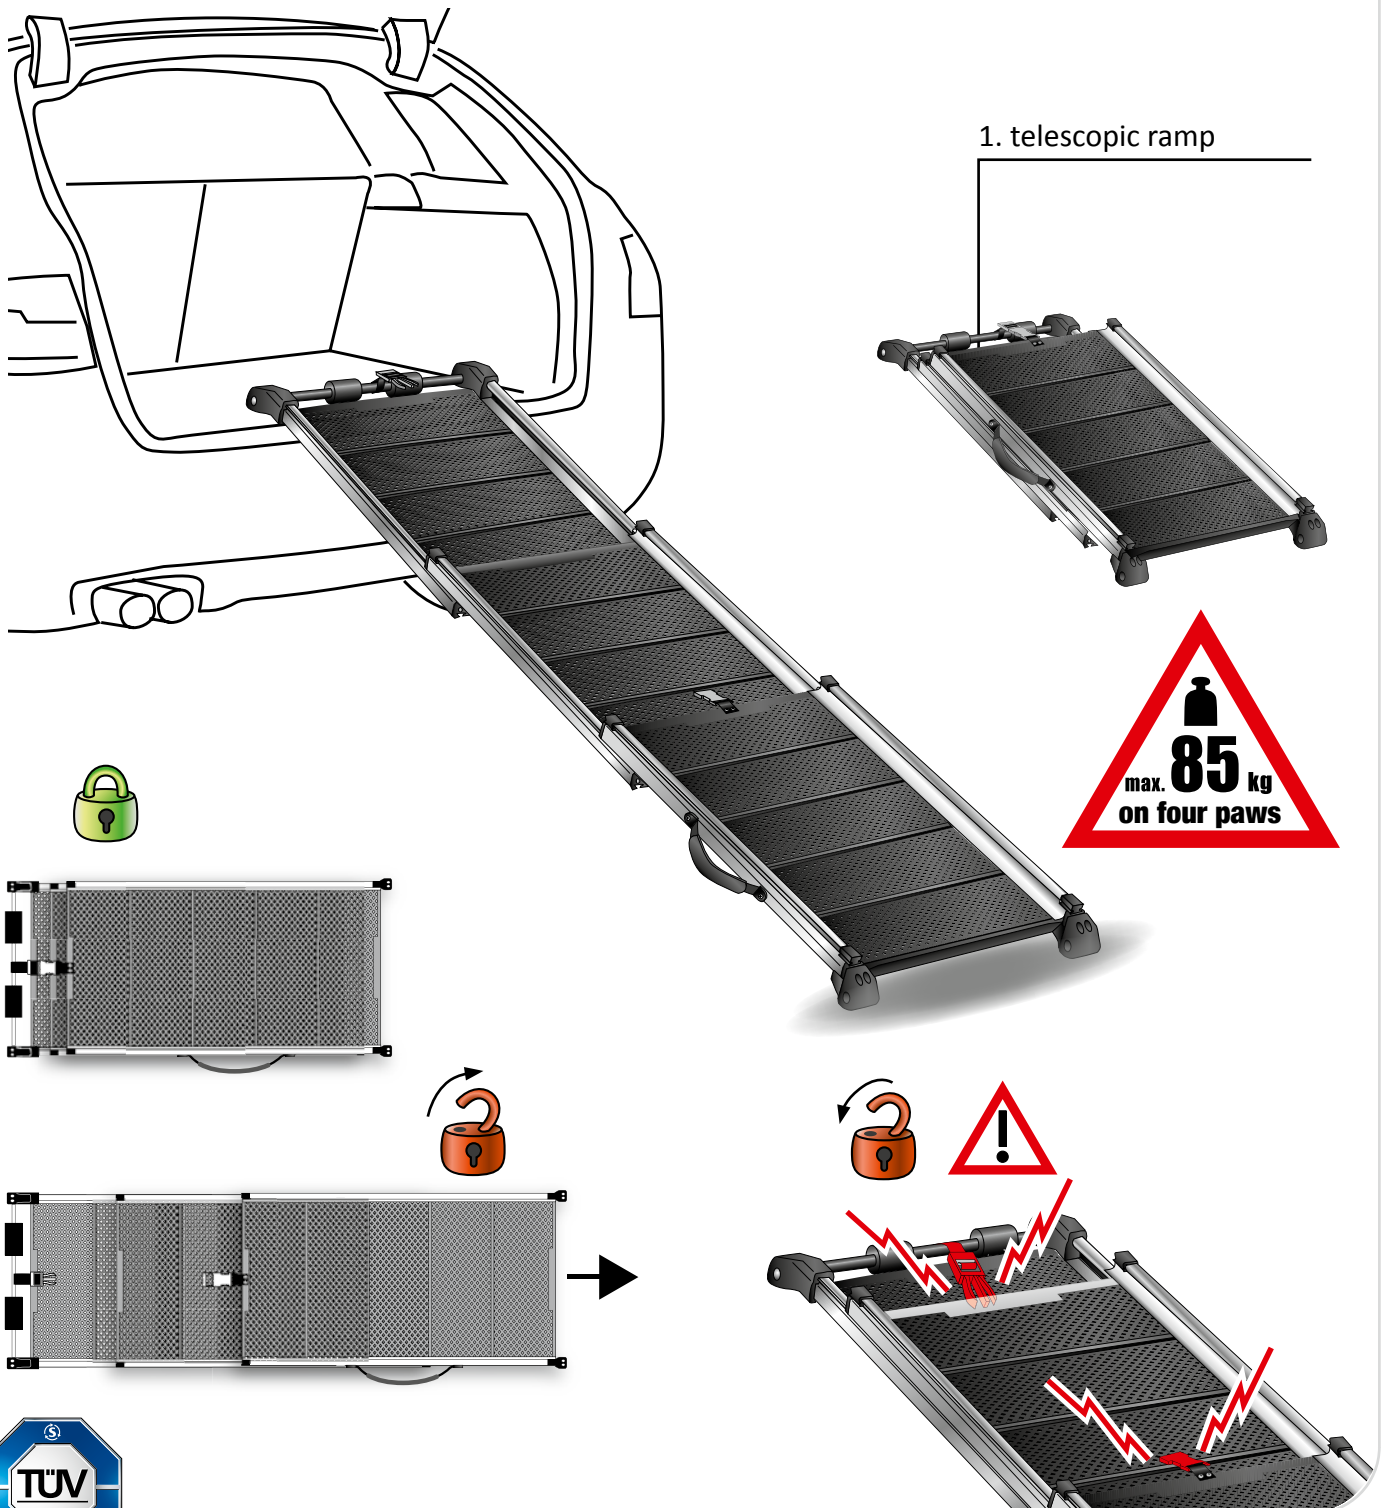


# Installation Instructions




## Security Notes


- Never use it the other way round (top and bottom reversed)

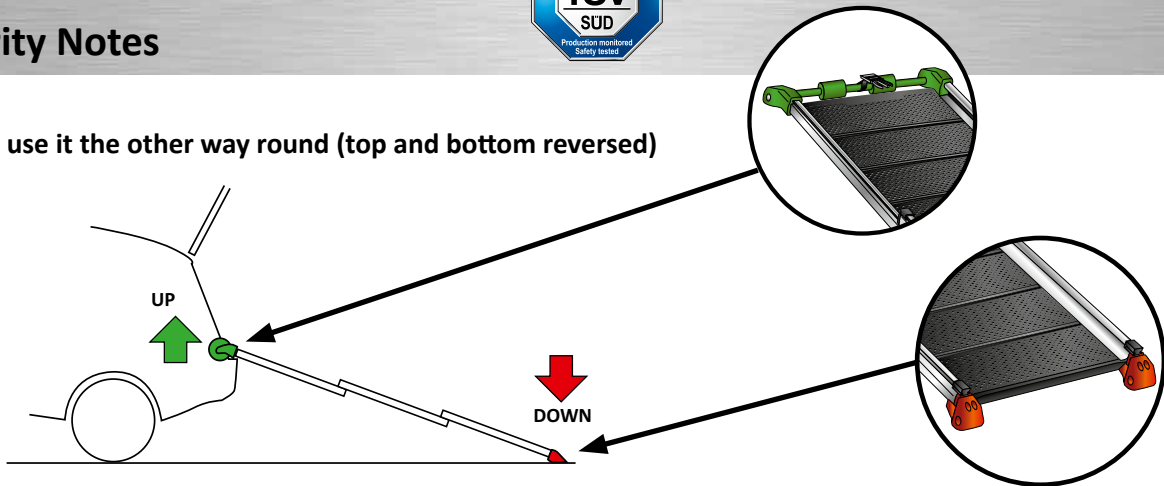

- It may only be used for dogs and other pets having a maximum weight of 85 kg on four paws.

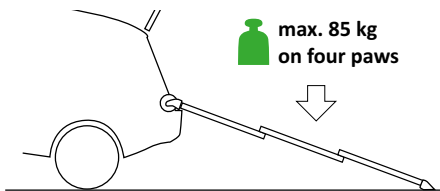

- The difference in height bridged must not exceed 70 cm (XL = 78 cm)

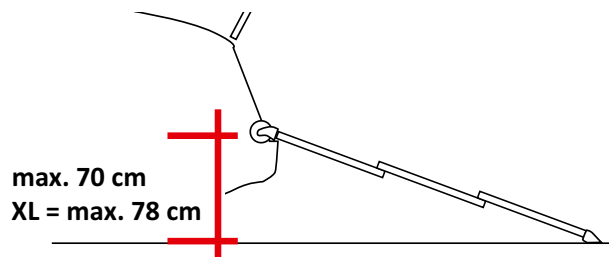

- ! Attention: do not use as loading ramp for humans or any other loads.

- Attention – risk of injury if handled incorrectly:  
Only touch the side handle or the upper crossbar (resting on pads).



- Do not use on loose surfaces (sand, gravel, etc.)

### General notes

Always position ramp properly, take care that it does not move. The contact surface must be free of dust and dirt. The positioning points are equipped with foam pads at the top to prevent scratching and with rubber feet at the bottom to prevent shifting. If you wish to protect other parts such as e.g. the bumper, it is recommendable to use an additional non-skidding base (for example ROLLMAT, BUMPPROTECT or STARLINER by Kleinmetall). After telescoping the ramp, make sure that the securing strap is properly tied up.

### Ramp and pet

As a pet is not used to walk over a ramp, it might be necessary to make it familiar with the ramp. Therefore, train your pet to use the ramp several times. Support your pet until it feels safe. Secure the pet with a lead or harness during training. Never force the pet to walk over the ramp.

### Instructions of care

Clean with soft detergents e.g. soap lye and water. For better functionality it is advisable to spray the gliding parts with universal oil (e.g. Balistol, WD40, etc.) from time to time, but especially after a wash. Regularly check the ramp for damages and if necessary, rectify the damage or replace the ramp. Check the lower rubber feet for proper condition before each use. The ramp must not be used if the feet are missing or impaired in their function.